

D-Link AirPlus DI-614+

Enhanced 2.4 GHz Wireless Broadband Router

Manual

Rev. 070502

D-Link
Building Networks for People

Contents

1.	Package Contents	3
2.	Introduction.....	4
3.	Wireless Basics	7
4.	Getting Started	10
5.	Using the Configuration Menu	12
6.	Troubleshooting.....	33
7.	Networking Basics.....	38
8.	Technical Specifications	70
9.	Contacting Technical Support.....	72
10.	Warranty and Registration.....	73

1. Package Contents



Contents of Package:

- **D-Link AirPlus DI-614+** Enhanced 2.4GHz Wireless Access Point
- Power Adapter – 5V DC, 2.5A
- Manual on CD
- Quick Installation Guide

Note: Using a power supply with a different voltage rating than the one included with the DI-614+ will cause damage and void the warranty for this product.

If any of the above items are missing, please contact your reseller.

System Requirements:

- Computer with a Windows, Macintosh, or Linux based operating system with an installed Ethernet adapter
- Internet Explorer or Netscape Navigator, version 4.0 or above, with JavaScript enabled

2. Introduction

The D-Link *AirPlus* DI-614+ Wireless Broadband Router is an enhanced 802.11b high-performance, wireless router. It is an ideal way to extend the reach and number of computers connected to your wireless network.


Unlike most 802.11b routers, the DI-614+ is capable of data transfer speeds up to 22 Mbps (compared to the standard 11 Mbps) when used with other D-Link *AirPlus* products such as the DWL-520+ Wireless PCI Adapter.

After completing the steps outlined in the *Quick Installation Guide* (included in your package) you will have the ability to share information and resources, such as files and printers, and enjoy the freedom that wireless networking delivers.

The DI-614+ is compatible with most popular operating systems, including Macintosh, Linux and Windows, and can be integrated into a large network. This Manual is designed to help you connect the Router and the D-Link *AirPlus* 2.4GHz Wireless Adapters into a network in Infrastructure mode. *Please take a look at the **Getting Started** section in this manual to see an example of an Infrastructure network using the DI-614+.*

This manual provides a quick introduction to wireless technology and its application as it relates to networking. Please take a moment to read through this manual and get acquainted with wireless technology.

Connections

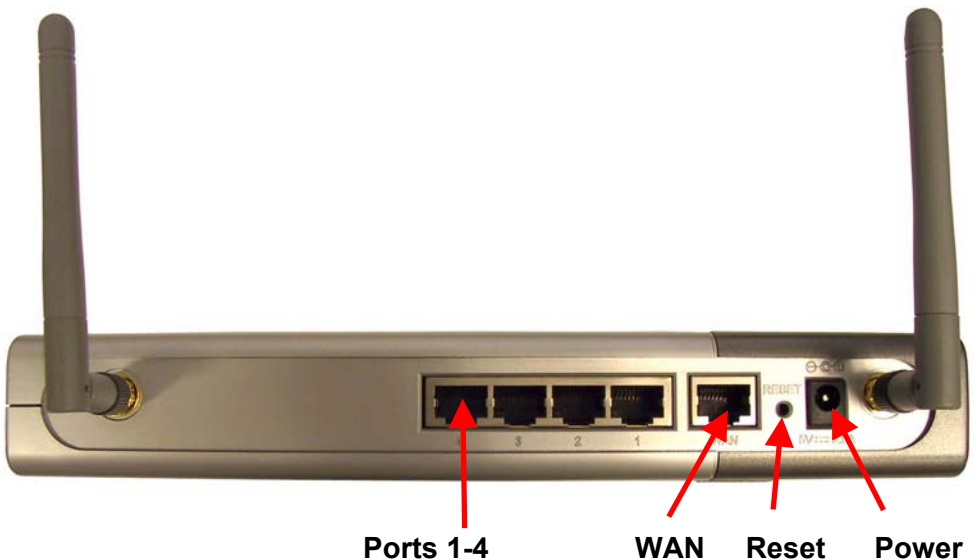

Reset: Used to restore the DI-614+ to the factory default settings

Power: Connect one end of the included power adapter into the power port and the other end into the power outlet.

WAN: WAN port socket (CAT5 Ethernet RJ-45 cable.) Connect your Cable or DSL modem.

PORTS 1-4: LAN port sockets (CAT5 Ethernet RJ-45 cable.) The LED glows steadily when a port is connected to a hub, switch or network-adapter-equipped computer in the local area network.

Features and Benefits

- Connects multiple computers to a Broadband (Cable or DSL) modem to share the Internet connection
- Supports VPN pass-through, providing added security
- Advanced Firewall features
- DHCP server supported enables all networked computers to automatically receive IP addresses
- Up to 2x faster with other *AirPlus* products with speeds up to 22Mbps
- Web-based interface for Managing and Configuring
- Access Control to manage users on the network
- Supports special applications that require multiple connections
- Operates in the 2.4GHz frequency range
- Maximum reliability, throughput and connectivity with automatic data rate switching.
- Stronger network security with 256-bit encryption.

LEDS

M1 LED -

A solid light indicates that the DI-614+ is ready.

M2 LED -

A solid light indicates that the unit is defective.

WAN LED -

A solid light indicates connection on the WAN port. This LED blinks during data transmission.



POWER LED -

A solid light indicates a proper connection to the power supply.

WLAN LED -

A solid light indicates that the wireless segment is ready. This LED blinks during wireless data transmission.

LOCAL NETWORK LED -

A solid light indicates a connection to an Ethernet-enabled computer on ports 1-4. This LED blinks during data transmission.

3. Wireless Basics

D-Link *AirPlus* wireless products are based on industry standards to provide easy-to-use and compatible high-speed wireless connectivity within your home, business or public access wireless networks. Strictly adhering to the IEEE standard, the D-Link *AirPlus* wireless family of products will allow you to access the data you want, when and where you want it. You will be able to enjoy the freedom that wireless networking delivers.

A wireless local area network (WLAN) is a cellular computer network that transmits and receives data with radio signals instead of wires. Wireless LANs are used increasingly in both home and office environments, and public areas such as airports, coffee shops and universities. Innovative ways to utilize WLAN technology are helping people to work and communicate more efficiently. Increased mobility and the absence of cabling and other fixed infrastructure have proven to be beneficial for many users.

Wireless users can use the same applications they use on a wired network. Wireless adapter cards used on laptop and desktop systems, support the same protocols as Ethernet adapter cards.

Under many circumstances, it may be desirable for mobile network devices to link to a conventional Ethernet LAN in order to use servers, printers or an Internet connection supplied through the wired LAN. A Wireless Access Point (AP) is a device used to provide this link.

People use wireless LAN technology for many different purposes:

Mobility - Productivity increases when people have access to data in any location within the operating range of the WLAN. Management decisions based on real-time information can significantly improve worker efficiency.

Low Implementation Costs – WLANs (Wireless Local Area Networks) are easy to set up, manage, change and relocate. Networks that frequently change, both physically and logically, can benefit from WLANs ease of implementation. WLANs can operate in locations where installation of wiring may be impractical.

Installation Speed and Simplicity - Installing a wireless LAN system can be fast and easy and can eliminate the need to pull cable through walls and ceilings.

Wireless Basics

Network Expansion - Wireless technology allows the network to go where wires cannot go.

Reduced Cost-of-Ownership - While the initial investment required for wireless LAN hardware might be higher than the cost of wired LAN hardware, overall installation expenses and life-cycle costs will be significantly lower. Long-term cost benefits are greatest in dynamic environments requiring frequent moves, adds, and changes.

Scalability – Wireless Local Area Networks (WLANs) can be configured in a variety of topologies to meet the needs of specific applications and installations. Configurations are easily changed and range from peer-to-peer networks suitable for a small number of users to full infrastructure networks of thousands of users that allow roaming over a broad area.

D-Link AirPlus Wireless Family of LAN products include:

- ◆ Enhanced 2.4GHz Wireless Cardbus Adapters used with laptop computers (DWL-650+)
- ◆ Enhanced 2.4GHz Wireless PCI cards used with desktop computers (DWL-520+)
- ◆ Enhanced 2.4GHz Wireless Router and Access Point (DI-614+,DWL-900AP+)

The DI-614+ is also compatible with the D-Link Air 802.11b family of products, which include:

- ◆ 2.4GHz Wireless Cardbus Adapters used with laptop computers (DWL-650)
- ◆ 2.4GHz Wireless PCI cards used with desktop computers (DWL-520)
- ◆ Wireless Router/Access Point/Print Servers (DI-713P)
- ◆ Wireless Access Points (DWL-1000AP, DWL-900AP)

Standards - Based Technology

The IEEE standard-based technology assures that the D-Link *AirPlus* Products are interoperable with existing compatible 2.4GHz wireless technology. This means you will be able to transfer large files quickly or even watch a movie in MPEG format over your network without noticeable delays. The technology works by using multiple frequencies in the 2.4GHz range at speeds up to 22 Mbps. D-Link *AirPlus* products will automatically

Wireless Basics

sense the best possible connection speed to ensure the greatest speed and range possible with the technology.

Installation Considerations

Designed to go up to 1,312 feet (400 meters) outdoors and up to 328 feet (100 meters) indoors, D-Link *AirPlus* DI-614+ lets you access your network with your laptop computer from virtually anywhere. Keep in mind, however, that the number, thickness and location of walls, ceilings or other objects that the wireless signals must pass thru may limit range. Typical ranges vary depending on the types of materials and background RF (radio frequency) noise in your home or business. The key to maximizing range is to follow these basic guidelines:

1. Keep the number of walls and ceilings between the wireless Access Point and your receiving device (e.g., the DWL-650+) to a minimum - Each wall or ceiling can reduce your D-Link *Air* Wireless product's range from 3-90 feet (1-30 meters.) Position your Access Points, Residential Gateways, and computers so that the number of walls or ceilings is minimized.
2. Be aware of the direct line between Access Points, Residential Gateways (routers) and computers. A wall that is 1.5 feet thick (.5 meters), at a 45-degree angle appears to be almost 3 feet (1 meter) thick. At a 2-degree angle it looks over 42 feet (14 meters) thick! Try to make sure that the Access Points and adapters are positioned so that the signal will travel straight through a wall or ceiling for better reception.
3. Building Materials make a difference - A solid metal door or aluminum studs may have a negative effect on range. Try to position Access Points, and computers with wireless adapters so that the signal passes through drywall or open doorways and not other materials.
4. Make sure that the device's antenna is positioned for best reception by using the software signal strength tools included with your product.
5. Keep your product away (at least 3-6 feet or 1-2 meters) from electrical devices or appliances that may generate extreme RF noise.

For the average home, signal range should not be an issue. If you experience low or no signal strength in areas of your home that you wish to access, consider positioning the Access Point in a location directly between the computers with wireless adapters. Additional Access Points can be connected to provide better coverage in rooms where the signal does not appear as strong as desired.

4. Getting Started

Right out of the box, with its default settings, the DI-614+ will automatically connect with other D-Link Air or AirPlus products.

For the price of a single IP Address from your Broadband Internet Service provider you can share the Internet with all the computers on your local network, without sacrificing speed or security, using D-Link AirPlus networking products.

IP ADDRESS

Please note: If you have a DHCP-capable router, such as the D-Link DI-614+, there is no need to assign an IP Address.

If you need to assign IP Addresses to the computers on the network, please remember that the **IP Address for each computer must be in the same IP Address range as all the computers in the network**, and the Subnet mask must be exactly the same for all the computers in the network.

For example: If the first computer is assigned an IP Address of 192.168.0.2 with a Subnet Mask of 255.255.255.0, then the second computer can be assigned an IP Address of 192.168.0.3 with a Subnet Mask of 255.255.255.0, etc.

IMPORTANT: If computers or other devices are assigned the same IP Address, one or more of the devices may not be visible on the network.

The **Infrastructure Network** example shown on the following page contains the following D-Link network devices:

A wireless Broadband Router - **D-Link AirPlus DI-614+**

A laptop computer with a wireless adapter - **D-Link AirPlus DWL-650+**

A desktop computer with a wireless adapter - **D-Link AirPlus DWL-520+**

A Cable modem - **D-Link DCM-200**

***DHCP** stands for **Dynamic Host Configuration Protocol**.
It is a protocol for assigning dynamic IP addresses “automatically.”
With a DHCP-capable gateway/router, there is
no need to manually assign an IP address.*

Getting Started

Setting Up an Infrastructure Network

Please refer to the following sections of this manual for additional information about setting up a network:

Networking Basics- learn how to check your IP Address; share printers and files.

Using the Configuration Utility- learn the settings you must use on each computer in your network for successful communication.

Troubleshooting- learn how to check for the proper installation of the network adapters' drivers and other tips for troubleshooting the network.




Please remember that **D-Link AirPlus** wireless devices are pre-configured to connect together, right out of the box, with the default settings.

- 1** You will need a broadband Internet access (Cable/DSL) subscription.
- 2** Consult with your Cable/DSL provider for proper installation of the modem.
- 3** Connect the modem to the DI-614+ Wireless Broadband Router. See the **Quick Installation Guide** included with the router.
- 4** If you are including a desktop computer in your network, you can install the **D-Link DFE-530TX+** Ethernet NIC adapter into the desktop computer. See the **Quick Installation Guide** included with the DFE-530TX+.
- 5** Install the drivers for the wireless network adapter (such as the **D-Link AirPlus DWL-650+**) into the laptop computer. See the **Quick Installation Guide** included with the DWL-650+.

5. Using the Configuration Menu


Whenever you want to configure your network or the DI-614+, you can access the Configuration Utility by opening the web-browser and typing in the IP Address of the DI-614+. The DI-614+ default IP Address is shown below:

- Open the web browser
- Type in the **IP Address** of the Access Point

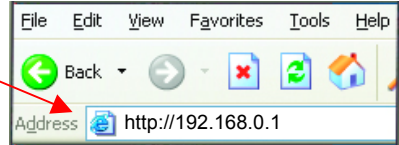

(The IP Address shown in the example above is the default setting. If you have changed the IP Address of the DI-614+ to conform to a network, then input that IP Address in the web browser, instead of the default IP Address shown.)

- Type **admin** in the **User Name** field (lower case)
- Leave the **Password** blank
- Click **OK**

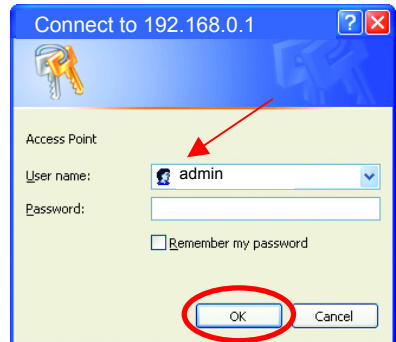

Setup Wizard

The Setup Wizard page is the first page that appears when logging into the web-based management interface. The Setup Wizard is a utility used to quickly configure the DI-614+. It will guide you through four quick and basic steps to help you connect to your ISP. You will be connected to your ISP (Internet Service Provider) and have Internet access within minutes.

Home > Wizard

The screenshot shows the configuration interface for a D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The page title is "DI-614+ Enhanced 2.4GHz Wireless Router". The navigation menu includes "Home", "Advanced", "Tools", "Status", and "Help". The "Home" tab is selected, and the sub-section is "Setup Wizard".

On the left sidebar, there are five buttons: "Wizard" (highlighted in yellow), "Wireless", "WAN", "LAN", and "DHCP".

The main content area contains the following text:

The DI-614+ is an Wireless Broadband Router ideal for home networking and small business networking. The setup wizard will guide you to configure the DI-614+ to connect to your ISP (Internet Service Provider). The DI-614+'s easy setup will allow you to have Internet access within minutes. Please follow the setup wizard step by step to configure the DI-614+.

Below the text is a "Run Wizard" button. In the bottom right corner, there is a "Help" icon (a red circle with a white plus sign) and the word "Help" below it.

Wireless

Wireless Settings are settings for the (Access Point) Portion of the Wireless Router. Allow you to change the wireless settings to fit an existing wireless network or to customize your wireless network.

Home > Wireless

The screenshot shows the configuration interface for a D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The page title is "DI-614+ Enhanced 2.4GHz Wireless Router". The navigation menu includes "Home", "Advanced", "Tools", "Status", and "Help". The "Home" tab is selected, and the sub-section is "Wireless Settings".

On the left sidebar, there are five buttons: "Wizard", "Wireless" (highlighted in yellow), "WAN", "LAN", and "DHCP".

The main content area contains the following text:

Wireless Settings
These are the wireless settings for the AP(Access Point)Portion.

SSID : default

Channel : 6

WEP : Enabled Disabled

WEP Encryption : 64Bit

Key Type : HEX

Passphrase :

Key1 : 0000000000

Key2 : 0000000000

Key3 : 0000000000

Key4 : 0000000000

At the bottom right, there are three icons: a green checkmark, a yellow 'X', and a red plus sign. Below these icons are the labels "Apply", "Cancel", and "Help".

SSID

Service Set Identifier (SSID) is the name designated for a specific wireless local area network (WLAN). The SSID's factory default setting is "**default**". The SSID can be easily changed to connect to an existing wireless network or to establish a new wireless network.

Channel

Indicates the channel setting for the DI-614+. By default the channel is set to **6**. The Channel can be changed to fit the channel setting for an existing wireless network or to customize the wireless network.

WEP

Wired Equivalent Protocol (WEP) is a wireless security protocol for Wireless Local Area Networks (WLAN). WEP provides security by encrypting the data that is sent over the WLAN. The DI-614+ supports 3 levels of WEP Encryption: 64Bit encryption, 128Bit encryption, and 256Bit encryption. WEP is **disabled** by default. The WEP setting can be changed to fit an existing wireless network or to customize your wireless network.

Key Type

The Key Types that are supported by the DI-614+ are HEX (Hexadecimal) and ASCII (American Standard Code for Information Interchange.) The Key Type can be changed to fit an existing wireless network or to customize your wireless network.

Passphrase

Enter a passphrase (HEX or ASCII characters) and the DI-614+ will automatically generate the keys 1-4 when the "Generate" button is pressed.

KEYS

Keys 1-4 allow you to easily change wireless encryption settings to maintain a secure network. Simply select the specific key to be used for encrypting wireless data on the network.

WAN

WAN is short for Wide Area Network. The WAN settings can be referred to as the Public settings. All IP information in the WAN settings are public IP addresses which are accessible on the Internet.

The WAN settings consist of three options: **Dynamic IP Address**, **Static IP Address**, and **PPPoE**. Select the appropriate option and fill in the information needed to connect to your ISP.

Home > WAN

D-Link
Building Networks for People

DI-614+
Enhanced 2.4GHz Wireless Router

Home Advanced Tools Status Help

WAN Settings


Please select the appropriate option to connect to your ISP.

- Dynamic IP Address** Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)
- Static IP Address** Choose this option to set static IP information provided to you by your ISP.
- PPPoE** Choose this option if your ISP uses PPPoE. (For most DSL users)

Dynamic IP

Host Name (optional)

MAC Address (optional)

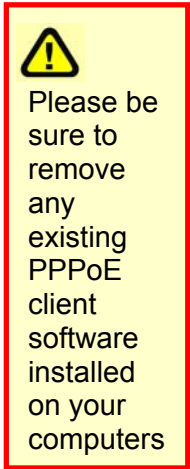

Dynamic IP Address

Choose **Dynamic IP Address** to obtain IP address information automatically from your ISP. Select this option if your ISP does not give you any IP numbers to use. This option is commonly used for Cable modem services.

Host Name: The Host Name field is optional but may be required by some ISPs. The host name is the device name of the Broadband Router.

MAC Address: The default MAC address is set to the WAN's physical interface MAC address on the Broadband Router. You can use the "Clone MAC Address" button to copy the MAC address of the Ethernet Card installed by your ISP and replace the WAN MAC address with this MAC address. It is not recommended that you change the default MAC address unless required by your ISP.

Static IP Address

The screenshot shows the configuration interface for a D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The page has a blue header with the D-Link logo and the model name. On the left, there is a vertical menu with buttons for Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area has tabs for Home, Advanced, Tools, Status, and Help. Under the Home tab, the 'WAN Settings' section is active, with a sub-section for 'Static IP'. It contains three radio button options: 'Dynamic IP Address', 'Static IP Address' (which is selected), and 'PPPoE'. Below these are five text input fields for IP Address, Subnet Mask, ISP Gateway Address, Primary DNS Address, and Secondary DNS Address, each with a placeholder '0.0.0.0'. At the bottom right, there are three buttons: 'Apply' (with a green checkmark), 'Cancel' (with a red X), and 'Help' (with a red plus sign).

Choose Static IP Address if all WAN IP information is provided to you by your ISP. You will need to enter in the IP address, subnet mask, gateway address, and DNS address(es) provided to you by your ISP. Each IP address entered in the fields must be in the appropriate IP form, which are four IP octets separated by a dot (x.x.x.x). The Router will not accept the IP address if it is not in this format.

IP Address: Public IP address provided by your ISP.

Subnet Mask: Subnet mask provided by your ISP.

ISP Gateway Address: Public IP address of your ISP that you are connecting to.

Primary DNS Address: Primary DNS (Domain Name Server) IP provided by your ISP

Secondary DNS Address: optional

PPPoE

Please be sure to remove any Client Software program on your computer before you start your configuration of the DI-614+ Router.

Choose PPPoE (Point to Point Protocol over Ethernet) if your ISP uses PPPoE connection. Your ISP will provide you with a username and password. This option

The screenshot shows the configuration interface for a D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The page has a blue header with the D-Link logo and the model name. Below the header is a navigation bar with tabs for Home, Advanced, Tools, Status, and Help. On the left side, there is a vertical menu with buttons for Wizard, Wireless, WAN (highlighted in yellow), LAN, and DHCP. The main content area is titled 'WAN Settings' and contains the following fields and options:

- WAN Settings:** Please select the appropriate option to connect to your ISP.
 - Dynamic IP Address: Choose this option to obtain an IP address automatically from your ISP. (For most Cable modem users)
 - Static IP Address: Choose this option to set static IP information provided to you by your ISP.
 - PPPoE: Choose this option if your ISP uses PPPoE. (For most DSL users)
- PPPoE:**
 - Dynamic PPPoE Static PPPoE
 - User Name: [Text input field]
 - Password: [Password input field]
 - Retype Password: [Password input field]
 - Service Name: [Text input field] (optional)
 - IP Address: [Text input field with 0.0.0.0]
 - Primary DNS Address: [Text input field with 0.0.0.0]
 - Secondary DNS Address: [Text input field with 0.0.0.0] (optional)
 - Maximum Idle Time: [Text input field with 0] Minutes
 - MTU: [Text input field with 1492]
 - Auto-reconnect: Enabled Disabled

At the bottom right of the form, there are three buttons: Apply (with a green checkmark), Cancel (with a red X), and Help (with a red plus sign).

is typically used for DSL services. Select Dynamic PPPoE to obtain an IP address automatically for your PPPoE connection. Select Static PPPoE to use a static IP address for your PPPoE connection.

Dynamic PPPoE: PPPoE connection where you will receive an IP address automatically from your ISP

Static PPPoE: PPPoE connection where you have an assigned (static) IP address

User Name: Your PPPoE username provided by your ISP

Password: Your PPPoE password provided by your ISP

Retype Password: Re-enter PPPoE password

Service Name: Enter the service name provided by your ISP. (optional)

IP Address: This option is only available for Static PPPoE. Enter in the static IP address for the PPPoE connection.

Primary DNS Address: Primary DNS IP provided by your ISP

Secondary DNS Address: optional


Maximum Idle time: The amount of time of inactivity before disconnecting your PPPoE session. Enter a Maximum Idle Time (in minutes) to define a maximum period of time for which the Internet connection is maintained during inactivity. If the connection is inactive for longer than the defined

Maximum Idle Time, then the connection will be dropped. Either set this to zero or enable Auto-reconnect to disable this feature.

MTU: MTU stands for Maximum Transmission Unit. For PPPoE connections, you may need to change the MTU settings in order to work correctly with your ISP.

Auto-reconnect: If enabled, the Broadband Router will automatically connect to your ISP after your system is restarted or if the connection is dropped.

HOME > LAN

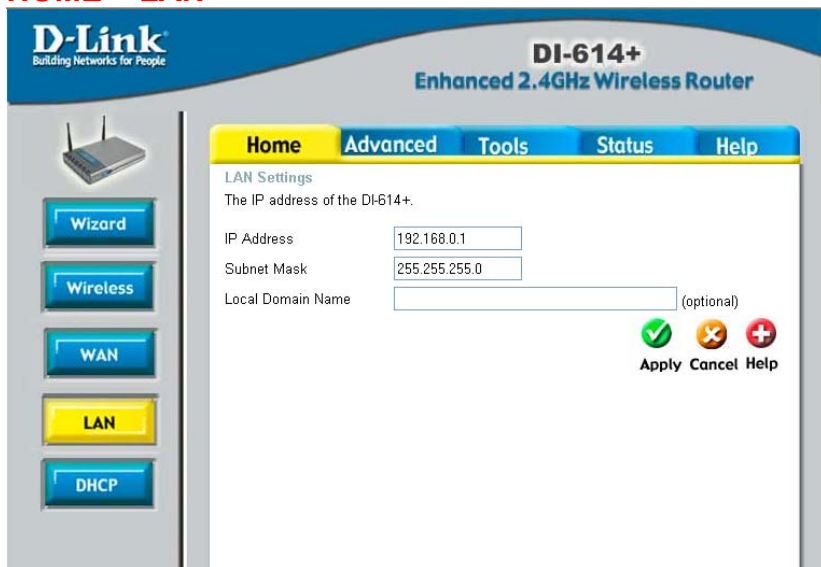

The screenshot shows the web interface of a D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The interface has a blue header with the D-Link logo and the router model. Below the header, there are navigation tabs: Home (selected), Advanced, Tools, Status, and Help. On the left side, there is a sidebar with icons for Wizard, Wireless, WAN, LAN (highlighted in yellow), and DHCP. The main content area is titled "LAN Settings" and contains the following information:

LAN Settings
The IP address of the DI-614+.

IP Address	<input type="text" value="192.168.0.1"/>
Subnet Mask	<input type="text" value="255.255.255.0"/>
Local Domain Name	<input type="text"/> (optional)

At the bottom right of the form, there are three buttons: a green checkmark icon labeled "Apply", an orange 'X' icon labeled "Cancel", and a red plus icon labeled "Help".

LAN is short for Local Area Network. This is considered your internal network. These are the IP settings of the LAN interface for the DI-614+. These settings may be referred to as Private settings. You may change the LAN IP address if needed. The LAN IP address is private to your internal network and cannot be seen on the Internet.

IP Address: The IP address of the LAN interface. The default IP address is 192.168.0.1.

Subnet Mask: The subnet mask of the LAN interface. The default subnet mask is 255.255.255.0.

Local Domain Name: This field is optional. Enter in the your local domain name.

The screenshot shows the DHCP Server configuration page for a D-Link DI-614+ router. The page has a blue header with the D-Link logo and the router model. A navigation bar at the top contains tabs for Home, Advanced, Tools, Status, and Help. On the left side, there is a vertical menu with buttons for Wizard, Wireless, WAN, LAN, and DHCP (which is highlighted in yellow). The main content area is titled 'DHCP Server' and contains the following text: 'The DI-614+ can be setup as a DHCP Server to distribute IP addresses to the LAN network.' Below this, there are settings for 'DHCP Server' (Enabled), 'Starting IP Address' (192.168.0.100), 'Ending IP Address' (192.168.0.199), and 'Lease Time' (1 Hour). At the bottom right, there are three buttons: Apply (green checkmark), Cancel (orange X), and Help (red plus). Below the settings is a 'DHCP Client Table' with the following data:

Host Name	IP Address	MAC Address	Expired Time
pm	192.168.0.100	00-02-96-03-A9-F1	Feb/05/2106 23:31:47

DHCP

DHCP stands for Dynamic Host Control Protocol. The DI-614+ has a built-in DHCP server. The DHCP Server will automatically assign an IP address to the computers on the LAN/private network. Be sure to set your computers to be DHCP clients by setting their TCP/IP settings to “Obtain an IP Address Automatically.” When you turn your computers on, they will automatically load the proper TCP/IP settings provided by the DI-614+. The DHCP Server will automatically allocate an unused IP address from the IP address pool to the requesting computer. You must specify the starting and ending address of the IP address pool.

Starting IP address: The starting IP address for the DHCP server’s IP assignment.

Ending IP address: The ending IP address for the DHCP server’s IP assignment.

Lease Time: The length of time for the IP lease.

ADVANCED > VIRTUAL SERVER

The screenshot shows the configuration interface for the Virtual Server feature on a D-Link DI-614+ router. The interface includes a navigation menu with buttons for Home, Advanced (selected), Tools, Status, and Help. On the left, there is a sidebar with buttons for Virtual Server, Applications, Filters, Firewall, DMZ, and Performance. The main content area is titled 'Virtual Server' and contains the following configuration options:

- Virtual Server is used to allow Internet users access to LAN services.
- Enabled/Disabled radio buttons (Disabled is selected).
- Name: Text input field with a Clear button.
- Private IP: Text input field.
- Protocol Type: Dropdown menu (TCP selected).
- Private Port: Text input field.
- Public Port: Text input field.
- Schedule: Radio buttons for Always (selected) and From time (00:00 AM to 00:00 AM) on Sun to Sun.

Below the configuration options is a 'Virtual Servers List' table with columns for Name, Private IP, Protocol, and Schedule. The table lists several pre-configured services, each with a checkbox and a set of icons (Apply, Cancel, Help).

Name	Private IP	Protocol	Schedule
<input type="checkbox"/> Virtual Server FTP	0.0.0.0	TCP 21/21	always
<input type="checkbox"/> Virtual Server HTTP	0.0.0.0	TCP 80/80	always
<input type="checkbox"/> Virtual Server HTTPS	0.0.0.0	TCP 443/443	always
<input type="checkbox"/> Virtual Server DNS	0.0.0.0	UDP 53/53	always
<input type="checkbox"/> Virtual Server SMTP	0.0.0.0	TCP 25/25	always
<input type="checkbox"/> Virtual Server POP3	0.0.0.0	TCP 110/110	always
<input type="checkbox"/> Virtual Server Telnet	0.0.0.0	TCP 23/23	always
<input type="checkbox"/> IPSec	0.0.0.0	UDP 500/500	always
<input type="checkbox"/> PPTP	0.0.0.0	TCP 1723/1723	always

Virtual Server

The DI-614+ can be configured as a virtual server so that remote users accessing Web or FTP services via the public IP address can be automatically redirected to local servers in the LAN (Local Area Network).

The DI-614+ firewall feature filters out unrecognized packets to protect your LAN network so all computers networked with the DI-614+ are invisible to the outside world. If you wish, you can make some of the LAN computers accessible from the Internet by enabling *Virtual Server*. Depending on the requested service, the DI-614+ redirects the external service request to the appropriate server within the LAN network.

The DI-614+ is also capable of port-redirection meaning incoming traffic to a particular port may be redirected to a different port on the server computer.

Each virtual services that are created will be listed at the bottom of the screen in the Virtual Servers List. There are already pre-defined virtual services already in the table. You may use them by enabling them and assigning the server IP to use that particular virtual service.

Name: The name referencing the virtual service.

Private IP: The server computer in the LAN (Local Area Network) that will be providing the virtual services.

Private Port: The port number of the service used by the Private IP computer.

Protocol Type: The protocol used for the virtual service.

Public Port: The port number on the WAN side that will be used to access the virtual service.

Schedule: The schedule of time when the virtual service will be enabled. The schedule may be set to Always, which will allow the particular service to always be enabled. If it is set to Time, select the time frame for the service to be enabled. If the system time is outside of the scheduled time, the service will be disabled.

Example #1:

If you have a Web server that you wanted Internet users to access at all times, you would need to enable it. Web (HTTP) server is on LAN (Local Area Network) computer 192.168.0.25. HTTP uses port 80, TCP.

Name: Web Server

Private IP: 192.168.0.25


Protocol Type: TCP

Private Port: 80

Public Port: 80

Schedule: always

Virtual Servers List

	Name	Private IP	Protocol	Schedule	
<input checked="" type="checkbox"/>	Virtual Server HTTP	192.168.0.25	TCP 80/80	always	 



Click on this icon to edit the virtual service.



Click on this icon to delete the virtual service.

Example #2:

If you have an FTP server that you wanted Internet users to access by WAN port 2100 and only during the weekends, you would need to enable it as such. FTP server is on LAN computer 192.168.0.30. FTP uses port 21, TCP.

Name: FTP Server
Private IP: 192.168.0.30
Protocol Type: TCP
Private Port: 21
Public Port: 2100
Schedule: From: 01:00AM to 01:00AM, Sat to Sun

- All Internet users who want to access this FTP Server must connect to it from port 2100. This is an example of port redirection and can be useful in cases where there are many of the same servers on the LAN network.

ADVANCED > APPLICATIONS

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router web interface. The 'Advanced' tab is selected, and the 'Special Application' configuration page is displayed. On the left, there is a navigation menu with buttons for Virtual Server, Applications, Filters, Firewall, DMZ, and Performance. The main content area includes a 'Special Application' section with fields for Name, Trigger Port, Trigger Type, Public Port, and Public Type. Below this is a 'Special Applications List' table with columns for NAME, Trigger, and Public. The table lists several applications with their respective port ranges and icons for edit and delete.

Special Application
Special Application is used to run applications that require multiple connections.

Enabled Disabled

Name:

Trigger Port: -

Trigger Type:

Public Port:

Public Type:

NAME	Trigger	Public	
<input type="checkbox"/> Battle.net	6112	6112	
<input type="checkbox"/> Dialpad	7175	51200-51201,51210	
<input type="checkbox"/> ICU II	2019	2000-2038,2050-2051,2069,2085,3010-3030	
<input type="checkbox"/> MSN Gaming Zone	47624	2300-2400,28800-29000	
<input type="checkbox"/> PC-to-Phone	12053	12120,12122,24150-24220	
<input type="checkbox"/> Quick Time 4	554	6970-6999	

Some applications require multiple connections, such as Internet gaming, video conferencing, Internet telephony and others. These applications have

difficulties working through NAT (Network Address Translation). Special Applications makes some of these applications work with the DI-614+. If you need to run applications that require multiple connections, specify the port normally associated with an application in the "Trigger Port" field, select the protocol type as TCP or UDP, then enter the public ports associated with the trigger port to open them for inbound traffic.

The DI-614+ provides some predefined applications in the table on the bottom of the web page. Select the application you want to use and enable it. **Note!** Only one PC can use each Special Application tunnel.

Trigger Name: This is the name referencing the special application.

Trigger Port: This is the port used to trigger the application. It can be either a single port or a range of ports.

Trigger Type: This is the protocol used to trigger the special application.

Public Port: This is the port number on the WAN side that will be used to access the application. You may define a single port or a range of ports. You can use a comma to add multiple ports or port ranges.

Public Type: This is the protocol used for the special application.

Schedule: This is the schedule of time when the special application will be enabled.

Filters

Filters are used to deny or allow LAN (Local Area Network) computers from accessing the Internet.

The DI-614+ can be setup to deny internal computers by their IP or MAC addresses. The DI-614+ can also block users from accessing restricted web sites.

IP Filters

Use IP Filters to deny LAN IP addresses from accessing the Internet.

You can deny specific port numbers or all ports for

ADVANCED > FILTERS

D-Link
Building Networks for People

DI-614+
Enhanced 2.4GHz Wireless Router

Home **Advanced** Tools Status Help

Filters
Filters are used to allow or deny LAN users from accessing the Internet.

IP Filters URL Blocking
 MAC Filters Domain Blocking

IP Filters
Use IP Filters to deny LAN IP addresses access to the Internet.

Enabled Disabled

IP: . .

Port: -

Protocol Type:

Schedule: Always

From: time : : AM to : : AM
day to

IP Filter List	IP Range	Protocol	Schedule	
<input type="checkbox"/>	*	TCP 20-21	always	<input type="button" value="Apply"/>
<input type="checkbox"/>	*	TCP 80	always	<input type="button" value="Apply"/>
<input type="checkbox"/>	*	TCP 443	always	<input type="button" value="Apply"/>
<input type="checkbox"/>	*	UDP 53	always	<input type="button" value="Apply"/>
<input type="checkbox"/>	*	TCP 25	always	<input type="button" value="Apply"/>
<input type="checkbox"/>	*	TCP 110	always	<input type="button" value="Apply"/>
<input type="checkbox"/>	*	ICMP 8	always	<input type="button" value="Apply"/>
<input type="checkbox"/>	*	TCP 23	always	<input type="button" value="Apply"/>

the specific IP address.


IP: The IP address of the LAN computer that will be denied access to the Internet.

Port: The single port or port range that will be denied access to the Internet.

Schedule: This is the schedule of time when the IP Filter will be enabled.


MAC Filters

Use MAC (Media Access Control) Filters to allow or deny LAN (Local Area Network) computers by their MAC addresses from accessing the Internet. You can either manually add a MAC address or select the MAC address from the list of clients that are currently connected to the Broadband Router.

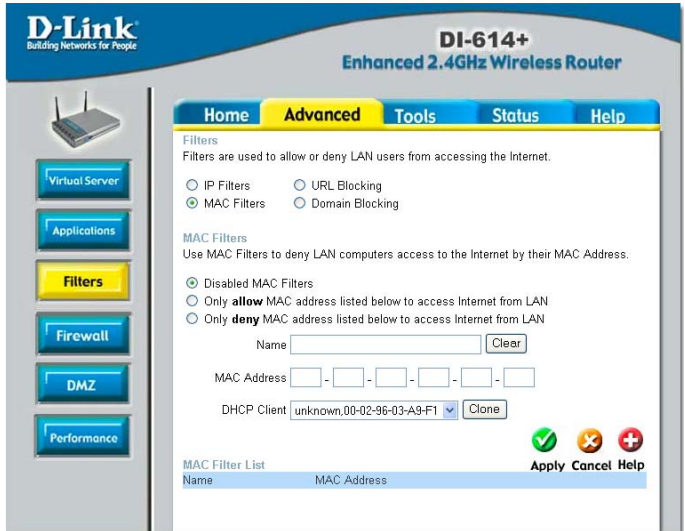

URL Blocking

URL Blocking is used to deny LAN computers from accessing specific web sites by its URL. A URL is a specially formatted text string that defines a location on the Internet. If any part of the URL contains the blocked word, the site will not be accessible and the web page will not display.

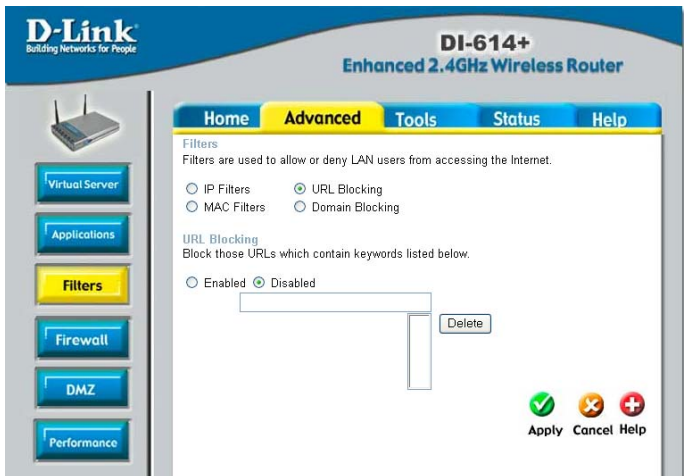

Domain Blocking

Domain Blocking is used to allow or deny LAN (Local Area Network) computers from accessing specific domains on the Internet. Domain blocking will deny all requests to a specific domain such as http and ftp. It can also allow computers to access specific sites and deny all other sites.

The screenshot shows the web interface of a D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The interface is in the 'Advanced' tab, specifically the 'Filters' section. The 'Domain Blocking' option is selected. The 'Domain Blocking' section is currently set to 'Disabled'. There are two sections for domain management: 'Permitted Domains' and 'Blocked Domains', each with a text input field and a 'Delete' button. At the bottom right, there are three icons: a green checkmark for 'Apply', a red 'X' for 'Cancel', and a red plus sign for 'Help'.

D-Link
Building Networks for People

DI-614+
Enhanced 2.4GHz Wireless Router

Home **Advanced** Tools Status Help

Filters
Filters are used to allow or deny LAN users from accessing the Internet.

IP Filters URL Blocking
 MAC Filters Domain Blocking

Domain Blocking
 Disabled
 Allow users to access all domains except "Blocked Domains"
 Deny users to access all domains except "Permitted Domains"

Permitted Domains
[Text Input] [Delete]

Blocked Domains
[Text Input] [Delete]

Apply Cancel Help

ADVANCED > FIREWALL

D-Link
Building Networks for People

DI-614+
Enhanced 2.4GHz Wireless Router

Home **Advanced** Tools Status Help

Firewall Rules
Firewall Rules can be used to allow or deny traffic from passing through the DI-614+.

Enabled Disabled

Name

Action Allow Deny

Interface IP Range Start IP Range End Protocol Port Range

Source * -

Destination * TCP -

Schedule Always

From time : : AM to : : AM

day to

Firewall Rules List


Action	Name	Source	Destination	Protocol	
<input checked="" type="checkbox"/>	Allow	Allow to Ping WAN port	WAN,*	LAN,192.168.0.1	ICMP,8
<input checked="" type="checkbox"/>	Deny	Default	*,*	LAN,*	IP (0),*
<input checked="" type="checkbox"/>	Allow	Default	LAN,*	*,*	IP (0),*

Firewall Rules is an advance feature used to deny or allow traffic from passing through the Broadband Router. It works in the same way as IP Filters with additional settings. You can create more detailed access rules for the DI-614+. When virtual services are created and enabled, it will also display in Firewall Rules. Firewall Rules contains all network firewall rules pertaining to IP (Internet Protocol).

In the **Firewall Rules List** at the bottom of the screen, the priorities of the rules are from top (highest priority) to bottom (lowest priority.)

Note: The DI-614+ MAC Address filtering rules have precedence over the Firewall Rules.

ADVANCED > DMZ

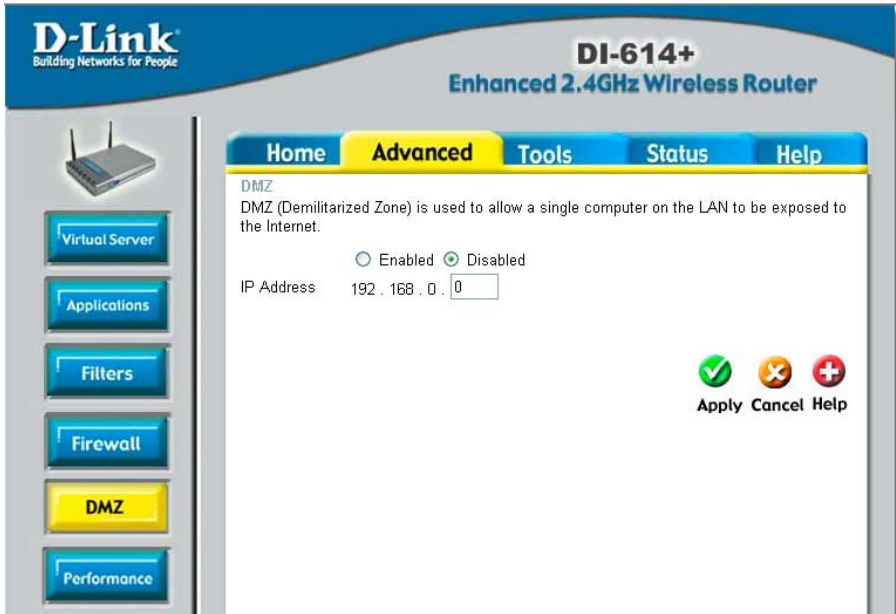

If you have a client PC that cannot run Internet applications properly from behind the DI-614+, then you can set the client up to unrestricted Internet access. It allows a computer to be exposed to the Internet. This feature is useful for gaming purposes. Enter the IP address of the internal computer that will be the DMZ host. Adding a client to the DMZ (Demilitarized Zone) may expose your local network to a variety of security risks, so only use this option as a last resort.

Admin

At this page, the DI-614+ administrator can change the system password. There are two accounts that can access the Broadband Router's Web-Management interface. They are **admin** and **user**. **Admin** has read/write access while **user** has read-only access. **User** can only view the settings but cannot make any changes.

TOOLS > ADMIN



Remote Management

Remote Management allows the DI-614+ to be configured from the Internet by a web browser. A username and password is still required to access the Web-Management interface. In general, only a member of your network can browse the built-in web pages to perform “Administrator” tasks. This feature enables you to perform “Administrator” tasks from the remote (Internet) host.

IP Address: Internet IP address of the computer that has access to the Broadband Router. **It is not recommended that you set the IP address to * (star), because this allows any Internet IP address to access the Broadband Router, which could result in a loss of security for your network.** If you elect to **enable** Remote Management, enter the IP Address of your remote location.

Port: Select the port number used to access the Broadband Router.

Example: <http://x.x.x.x:8080> whereas x.x.x.x is the WAN IP address of the Broadband Router and 8080 is the port used for the Web-Management interface.

TOOLS > TIME

Time

The system time is the time used by the DI-614+ for scheduling services. You can manually set the time or connect to a NTP (Network Time Protocol) server. If an NTP server is set, you will only need to set the time zone. If you manually set the time, you may also set Daylight Saving dates and the system time will automatically adjust on those dates.



The screenshot shows the 'Tools' section of the D-Link DI-614+ web interface. The 'Time' tab is selected. The page title is 'DI-614+ Enhanced 2.4GHz Wireless Router'. The navigation menu includes Home, Advanced, Tools, Status, and Help. The 'Time' section contains the following fields and options:


- Local Time: Feb/06/21/06 02:17:04
- Time Zone: (GMT-08:00) Pacific Time (US & Canada)
- Default NTP Server: (optional)
- Set the Time: Year (2002), Month (Feb), Day (06), Hour (02), Minute (17), Second (04), Set Time button
- Daylight Saving: Enabled (radio button selected), Disabled (radio button), Start (Jan 01), End (Jan 01), Set Time button

At the bottom right, there are three buttons: Apply (green checkmark), Cancel (red X), and Help (red plus sign).

TOOLS > SYSTEM

System Settings

The current system settings can be saved as a file onto the local hard drive. The saved file or any other saved setting file can be loaded back on the Broadband Router. To reload a system settings file, click on Browse to browse the

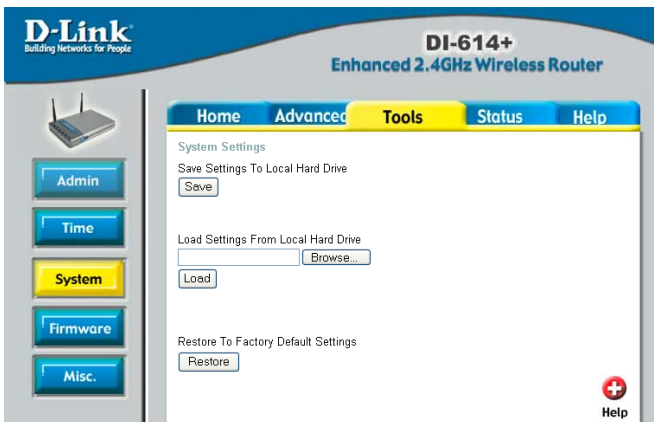

The screenshot shows the 'System Settings' page in the 'Tools' section of the D-Link DI-614+ web interface. The page title is 'DI-614+ Enhanced 2.4GHz Wireless Router'. The navigation menu includes Home, Advanced, Tools, Status, and Help. The 'System Settings' section contains the following options:

- Save Settings To Local Hard Drive: Save button
- Load Settings From Local Hard Drive: Browse... button, Load button
- Restore To Factory Default Settings: Restore button


At the bottom right, there is a Help button (red plus sign).

local hard drive and locate the system file to be used. You may also reset the Broadband Router back to factory settings by clicking on **Restore**.

Firmware Upgrade

You can upgrade the firmware of the Broadband Router at this page. Make sure the firmware you want to use is on the local hard drive of the computer. Click on Browse to browse the local hard drive and locate the firmware to be used for the update. Please check the D-Link support site for firmware updates at <http://support.dlink.com>.

TOOLS > FIRMWARE

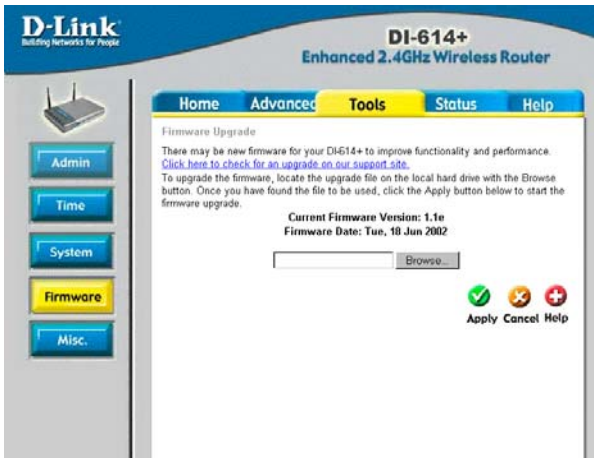


TOOLS > MISC

Miscellaneous Items

These are additional tools and features of the Broadband Router.

Ping Test

This useful diagnostic utility can be used to check if a computer is on the Internet. It sends ping packets and listens for replies from the specific host.

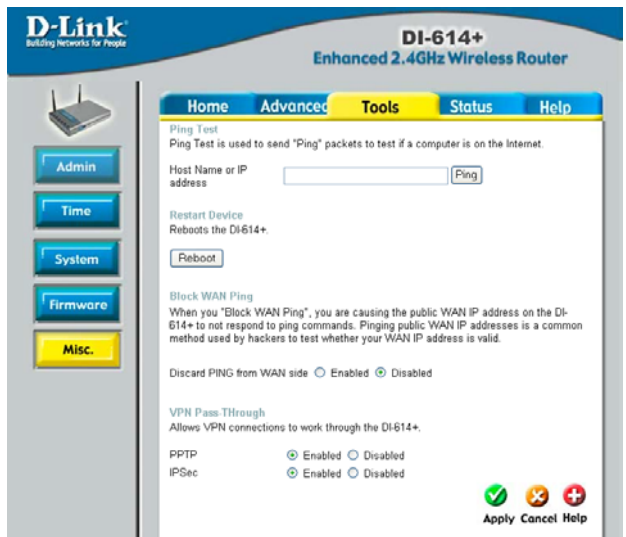

Restart Device

If for any reason the Broadband Router is not responding correctly, you may want to restart the Broadband Router.

Block WAN Ping

When you “Block WAN Ping”, will not respond to ping commands from the Internet. Pinging public WAN IP addresses is a common method used by hackers to test whether your WAN IP address is valid.

Discard PING from WAN side: By enabling this option, the DI-614+ will not reply to ping (ICMP) request packets from the Internet.

VPN Pass-Through

The Broadband Router supports VPN (Virtual Private Network) pass-through for both PPTP (Point-to-Point Tunneling Protocol) and IPsec (IP Security). Once VPN pass-through is enabled, there is no need to open up virtual services. Multiple VPN connections can be made through the Broadband Router. This is useful when you have many VPN clients on the LAN network.

Device Information

This page in the Configuration Utility displays the current information for the Broadband Router. It will display the WAN, LAN, and MAC address information.

If your WAN connection is set up for **Dynamic IP** address a **Release** button and **Renew** button will be displayed. Use **Release** to disconnect from your ISP and use **Renew** to connect to your ISP.

STATUS > DEVICE INFO

The screenshot shows the configuration utility interface for a D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The page title is "STATUS > DEVICE INFO". The interface includes a navigation menu with "Home", "Advanced", "Tools", "Status", and "Help". The "Status" tab is selected, displaying "Device Information".

Device Information: Firmware Version: 1.1, Thu, 30 May 2002

LAN

- MAC Address: 00-05-5D-5B-73-E4
- IP Address: 192.168.0.1
- Subnet Mask: 255.255.255.0
- DHCP Server: Enabled

WAN

- MAC Address: 00-05-5D-5B-73-E5
- Connection: DHCP Client Disconnected
- Buttons: DHCP Release, DHCP Renew
- IP Address: 0.0.0.0
- Subnet Mask: 0.0.0.0
- Default Gateway: 0.0.0.0
- DNS: (empty)

Wireless

- MAC Address: 00-05-5D-5A-60-17
- SSID: default
- Channel: 6
- WEP: Disabled

On the left side of the interface, there is a sidebar with a router icon and four buttons: "Device Info" (highlighted in yellow), "Log", "Stats", and "Wireless". A "Help" button with a red cross icon is located in the bottom right corner.

If your WAN connection is set up for **PPPoE**, a **Connect** button and **Disconnect** button will be displayed. Use **Disconnect** to drop the PPPoE connection and use **Connect** to establish the PPPoE connection.

This page allows you to observe the DI-614+'s working status:

WAN

- **IP Address:** WAN/Public IP Address
- **Subnet Mask:** WAN/Public Subnet Mask
- **Gateway:** WAN/Public Gateway IP Address
- **Domain Name Server:** WAN/Public DNS IP Address
- **Wan Status:** WAN Connection Status

LAN

- **IP Address:** LAN/Private IP Address of the DI-614+
- **Subnet Mask:** LAN/Private Subnet Mask of the DI-614+

Firmware version: Displays the current firmware version

WAN MAC Address: Displays the WAN port MAC/hardware address

LAN MAC Address: Displays the LAN port MAC/hardware address

Log

The Broadband Router keeps a running log of events and activities occurring on the Router. If the device is rebooted, the logs are automatically cleared. You may save the log files under Log Settings.

First Page - The first page of the log.

Last Page - The last page of the log.

Previous - Moves back one log page.

Next - Moves forward one log page.

Clear - Clears the logs completely.

Log Settings - Brings up the page to configure the logs.

STATUS > LOG

The screenshot shows the D-Link DI-614+ Enhanced 2.4GHz Wireless Router's web interface. The 'Status' tab is selected, and the 'Log' sub-tab is active. The log displays a series of DHCP Discover events. Navigation buttons include 'First Page', 'Last Page', 'Previous', 'Next', 'Clear', and 'Log Settings'. A red plus icon is also present.

Time	Message	Source	Destination	Note
Feb/06/2106 02:21:33	DHCP Discover			
Feb/06/2106 02:21:17	DHCP Discover			
Feb/06/2106 02:21:08	DHCP Discover			
Feb/06/2106 02:21:04	DHCP Discover			
Feb/06/2106 02:21:03	DHCP Discover no response			
Feb/06/2106 02:21:02	DHCP Discover			
Feb/06/2106 02:20:29	DHCP Discover			
Feb/06/2106 02:20:12	DHCP Discover			
Feb/06/2106 02:20:03	DHCP Discover			
Feb/06/2106 02:19:59	DHCP Discover			

Log Settings

Not only does the Broadband Router display the logs of activities and events, it can be setup to send these logs to another location.

SMTP Server - The address of the SMTP server that will be used to send the logs.

Send to - The email address the logs will be sent to. Click on Email Log Now to send the email.

Traffic Statistics

The Broadband Router keeps statistic of traffic that passes through it. You are able to view the amount of packets that passes through the Router on both the WAN port and the LAN port. The traffic counter will reset if the device is rebooted.

STATUS > STATS




The screenshot shows the 'Status > Stats' page of the D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The page title is 'Traffic Statistics' and it includes a sub-header 'Traffic Statistics display Receive and Transmit packets passing through the DI-614+'. There are 'Refresh' and 'Reset' buttons. A table shows the following data:

	Receive	Transmit
WAN	0 Packets	1083 Packets
LAN	1449 Packets	1670 Packets
WIRELESS	338 Packets	581 Packets

Connected Wireless Clients List

The wireless client table displays a list of current connected wireless clients. This table also displays the time and MAC address of the wireless client connected.

STATUS > WIRELESS

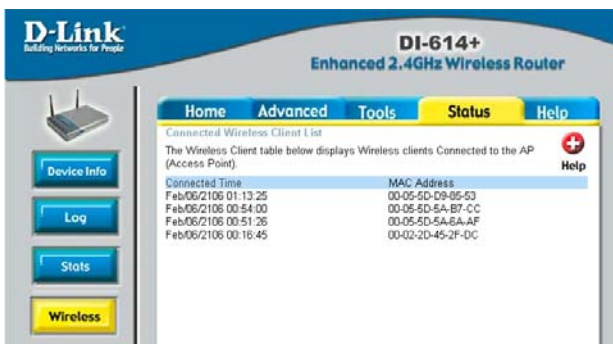

The screenshot shows the 'Status > Wireless' page of the D-Link DI-614+ Enhanced 2.4GHz Wireless Router. The page title is 'Connected Wireless Client List' and it includes a sub-header 'The Wireless Client table below displays Wireless clients Connected to the AP (Access Point)'. There is a 'Help' button. A table shows the following data:

Connected Time	MAC Address
Feb/06/2106 01:13:25	00-05-5D-D9-05-53
Feb/06/2106 00:54:00	00-05-5D-5A-B7-CC
Feb/06/2106 00:51:26	00-05-5D-5A-6A-AF
Feb/06/2106 00:16:45	00-02-20-45-2F-DC

6. Troubleshooting

This chapter provides solutions to problems that can occur during the installation and operation of the DI-614+ Wireless Access Point. We cover various aspects of the network setup, including the network adapters. Please read the following if you are having problems.


(Note: It is recommended that you use an Ethernet connection to configure the DI-614+ Access Point.)

1. The computer used to configure the DI-614+ cannot access the Configuration menu.

- Check that the **Ethernet LED** on the DI-614+ is **ON**. If the **LED** is not **ON**, check that the cable for the Ethernet connection is securely inserted.
- Check that the Ethernet Adapter is working properly. Please see item 6 (**Check that the drivers for the network adapters are installed properly**) in this **Troubleshooting** section to check that the drivers are loaded properly.
- Check that the **IP Address** is in the same range and subnet as the DI-614+. Please see **Checking the IP Address in Windows XP** in the **Networking Basics** section of this manual.

Note: The IP Address of the DI-614+ is 192.168.0.1. All the computers on the network must have a unique IP Address in the same range, e.g., 192.168.0.x. and a Subnet Mask of 255.255.255.0. Any computers that have identical IP Addresses will not be visible on the network.

- Do a **Ping test** to make sure that the DI-614+ is responding. Go to **Start>Run>Type Command>Type ping 192.168.0.1**. A successful ping will show four replies.

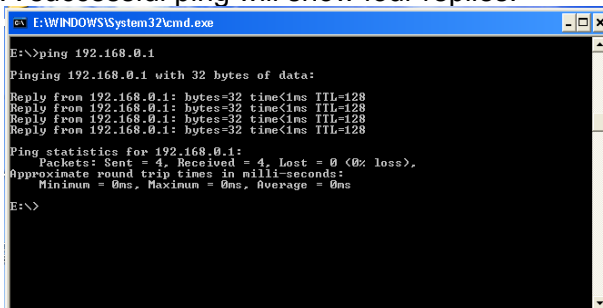

```


E:\WINDOWS\System32\cmd.exe
E:\>ping 192.168.0.1
Pinging 192.168.0.1 with 32 bytes of data:
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128
Reply from 192.168.0.1: bytes=32 time<1ms TTL=128

Ping statistics for 192.168.0.1:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
E:\>
```

Troubleshooting

2. The wireless client cannot access the Internet in the Infrastructure mode.

- Make sure the wireless client is associated and joined with the correct router. To check this connection: **Right-click** on the **Local Area Connection icon** in the taskbar> select **View Available Wireless Networks**. The **Connect to Wireless Network** screen will appear. Please make sure you have selected the correct available network, as shown in the illustrations below.

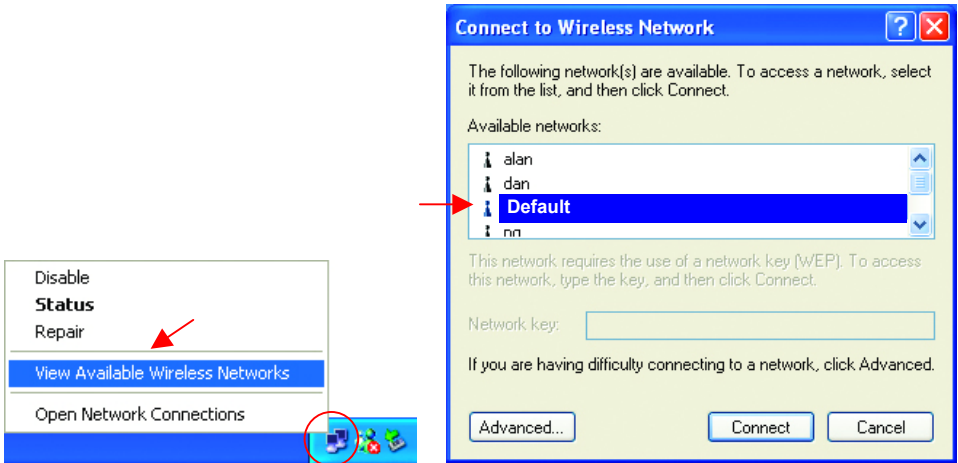

- Check that the **IP Address** assigned to the wireless adapter is within the same **IP Address range** as the gateway. *Since the DI-614+ has an IP Address of 192.168.0.1, wireless adapters must have an IP Address in the same range, e.g., 192.168.0.x. Each device must have a unique IP Address; no two devices may have the same IP Address. The subnet mask must be the same for all the computers on the network.)* To check the **IP Address** assigned to the wireless adapter, **double-click** on the **Local Area Connection icon** in the taskbar > select the **Support tab** and the **IP Address** will be displayed. (Please refer to **Checking the IP Address** in the **Networking Basics** section of this manual.)
- If it is necessary to assign a **Static IP Address** to the wireless adapter, please refer to the appropriate section in **Networking Basics**. If you are entering a **DNS Server address** you must also enter the **Default Gateway Address**. *(Remember that if you have a DHCP-capable router, you will not need to assign a Static IP Address. See **Networking Basics: Assigning a Static IP Address**.)*


Troubleshooting

3. Check that the drivers for the network adapters are installed properly.


You may be using different network adapters than those illustrated here, but this procedure will remain the same, regardless of the type of network adapters you are using.

- Go to **Start**
- **Right-click** on **My Computer**
- Click **Properties**

NOTE: Screen shots taken using Windows XP. If you are using a different Operating System your screen may look different.

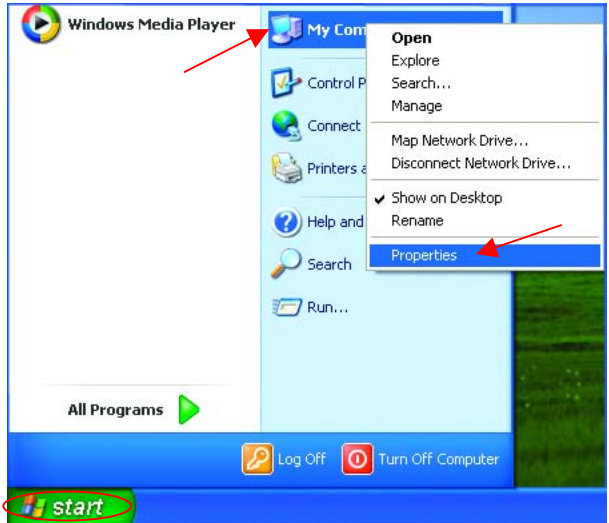


- **Select the Hardware Tab**
- Click **Device Manager**

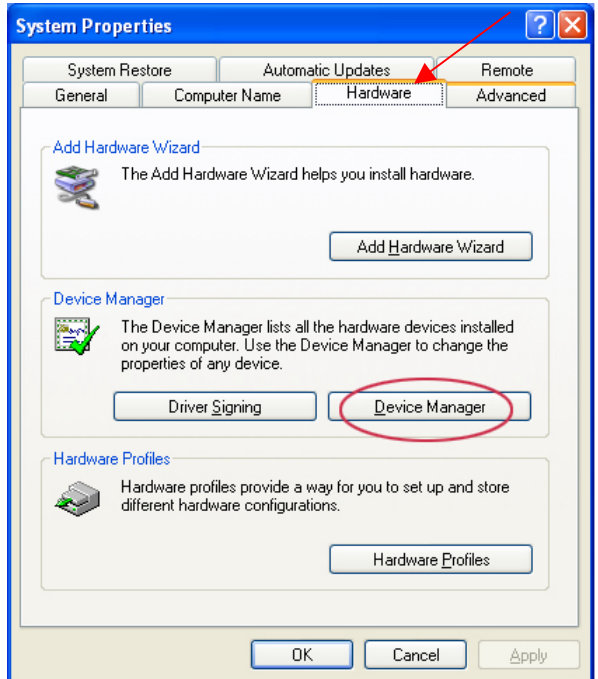


Troubleshooting

- Double-click on **Network Adapters**
- **Right-click** on **D-Link AirPlus DWL-650+ Wireless Cardbus Adapter**
- Select **Properties** to check that the drivers are installed properly

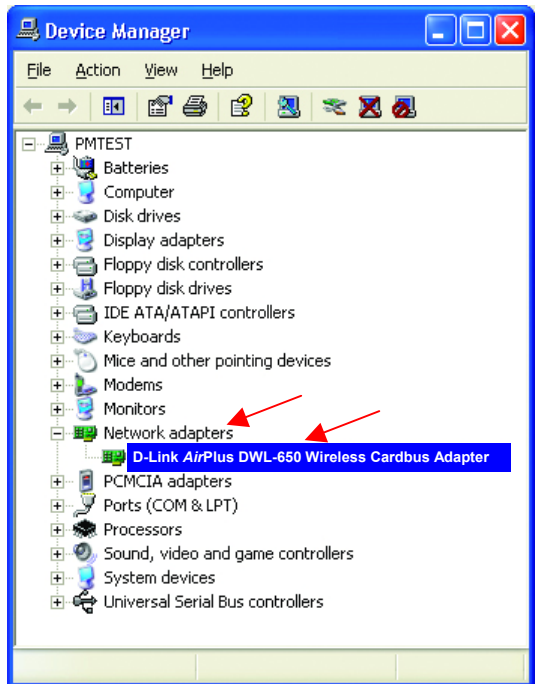

- Look under **Device Status** to check that the device is working properly.

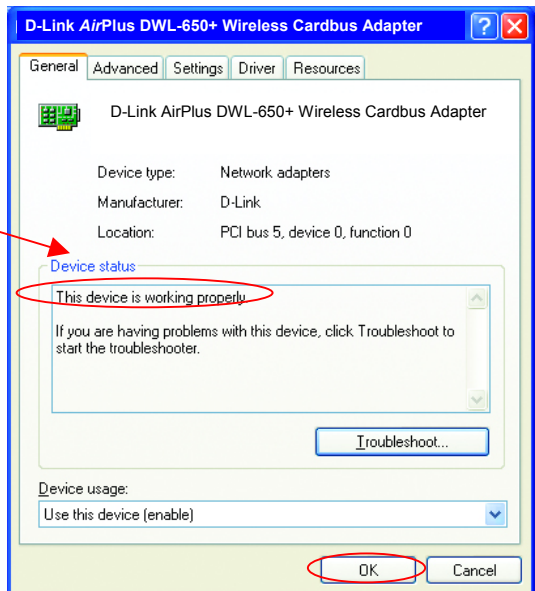

- Click **OK**

Troubleshooting

4. Resetting the DI-614+ to Factory Default Settings

After you have tried other methods for troubleshooting your network, you may choose to **Reset** the DI-614+ to the factory default settings. Remember that D-Link *AirPlus* products network together, out of the box, at the factory default settings.



To hard-reset the D-Link *AirPlus* DI-614+ to Factory Default Settings, please do the following:

- Leave the device powered on, do not disconnect the power
- Press the reset button and hold (use a paper clip)
- Keep the button pressed about 10 seconds
- Release the button

The DI-614+ will then automatically reboot itself.


7. Networking Basics

Using the Network Setup Wizard in Windows XP

In this section you will learn how to establish a network at home or work, using **Microsoft Windows XP**.

Note: Please refer to websites such as <http://www.homenethelp.com> and <http://www.microsoft.com/windows2000> for information about networking computers using Windows 2000, ME or 98.


Go to **Start>Control Panel>Network Connections**
Select **Set up a home or small office network**

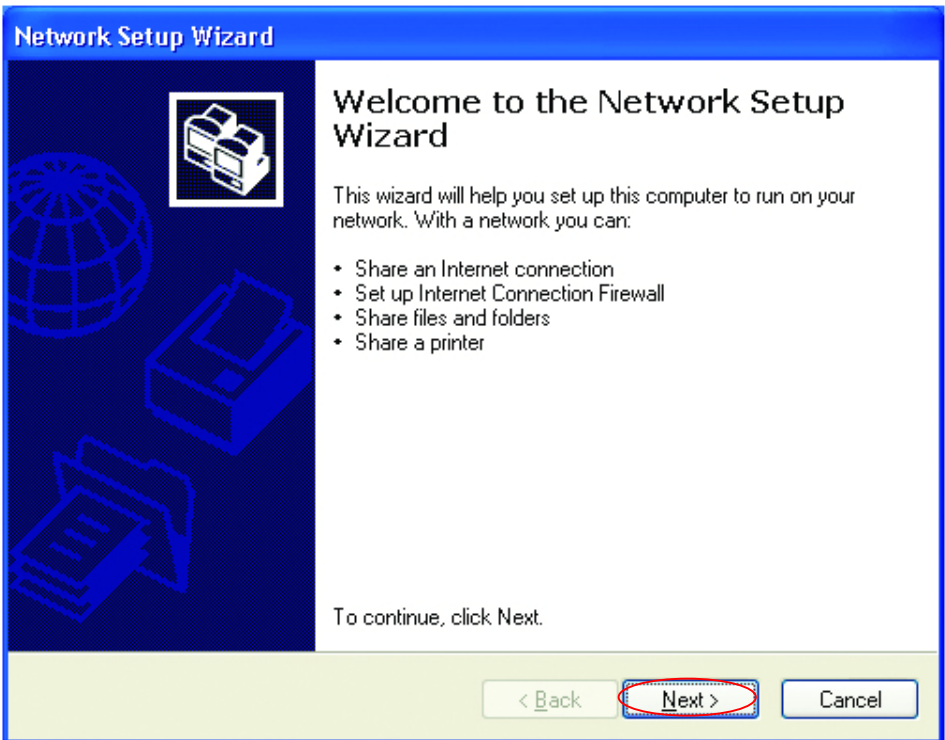

When this screen appears, **Click Next.**


Networking Basics

Please follow all the instructions in this window:

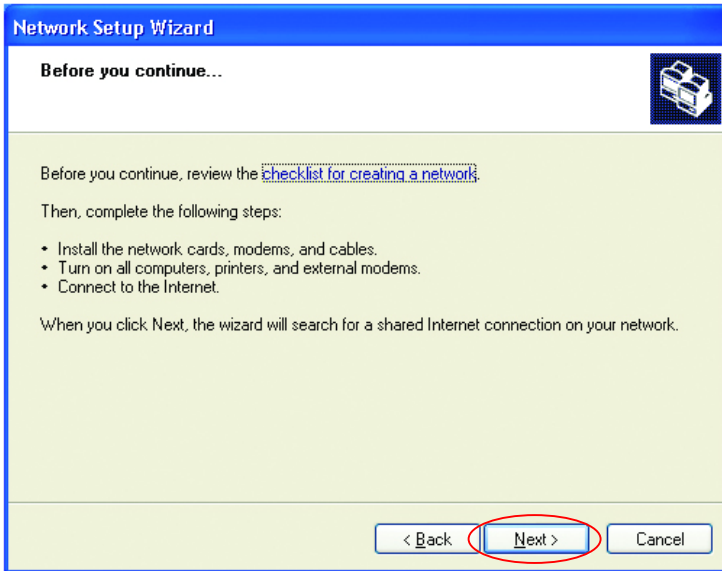

Click **Next**


In the following window, select the best description of your computer. If your computer connects to the internet through a gateway/router, select the second option as shown.

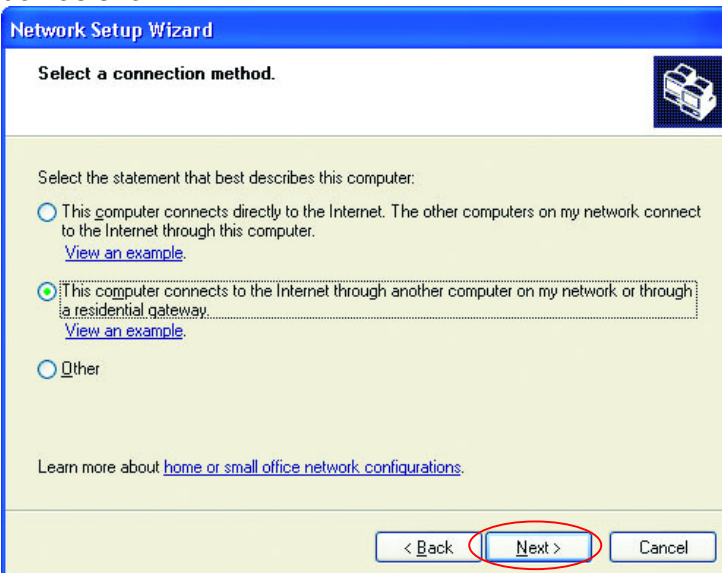

Click **Next**

Networking Basics


Enter a **Computer description** and a **Computer name** (optional.)

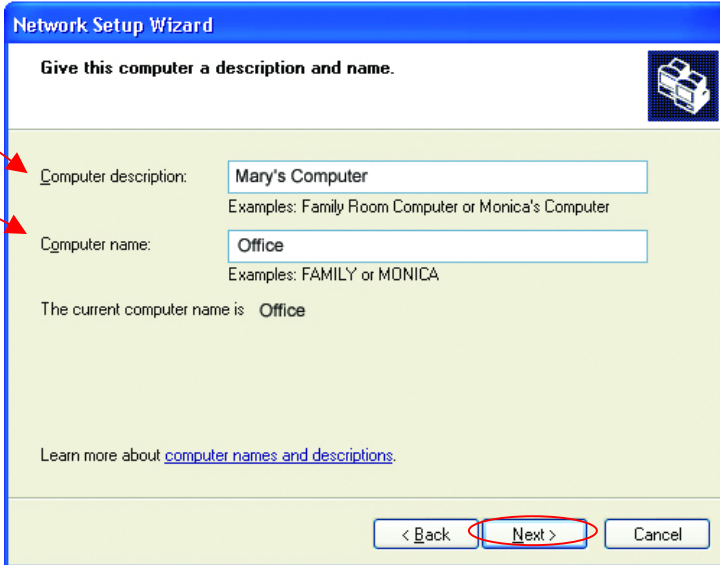

The screenshot shows the 'Network Setup Wizard' window with the title 'Give this computer a description and name.' The window has a blue header and a light green background. At the top right is a printer icon. Below the title, there are two input fields: 'Computer description:' with the text 'Mary's Computer' and 'Examples: Family Room Computer or Monica's Computer', and 'Computer name:' with the text 'Office' and 'Examples: FAMILY or MONICA'. Below these fields, it says 'The current computer name is Office'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is circled in red. Two red arrows point to the 'Computer description:' and 'Computer name:' labels.

Click **Next**

Enter a **Workgroup** name. All computers on your network should have the same **Workgroup name**.

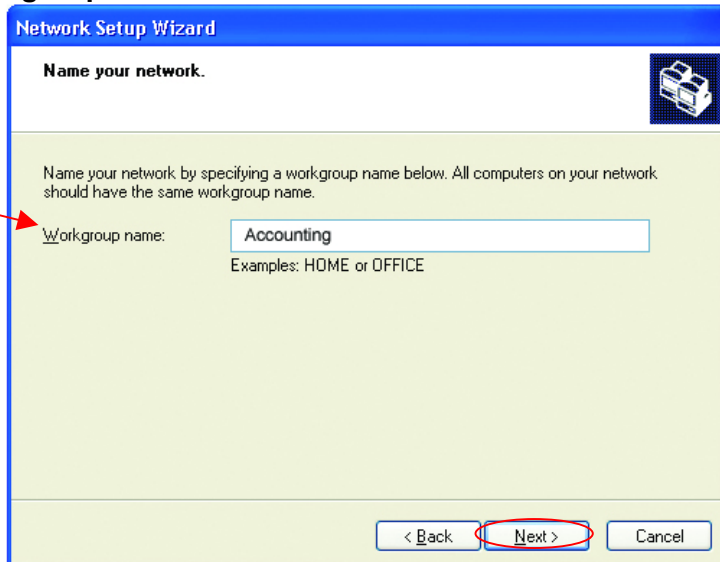


The screenshot shows the 'Network Setup Wizard' window with the title 'Name your network.' The window has a blue header and a light green background. At the top right is a printer icon. Below the title, there is a text block: 'Name your network by specifying a workgroup name below. All computers on your network should have the same workgroup name.' Below this text is an input field for 'Workgroup name:' with the text 'Accounting' and 'Examples: HOME or OFFICE'. At the bottom, there are three buttons: '< Back', 'Next >', and 'Cancel'. The 'Next >' button is circled in red. A red arrow points to the 'Workgroup name:' label.

Click **Next**


Networking Basics

Please wait while the **Network Setup Wizard** applies the changes.

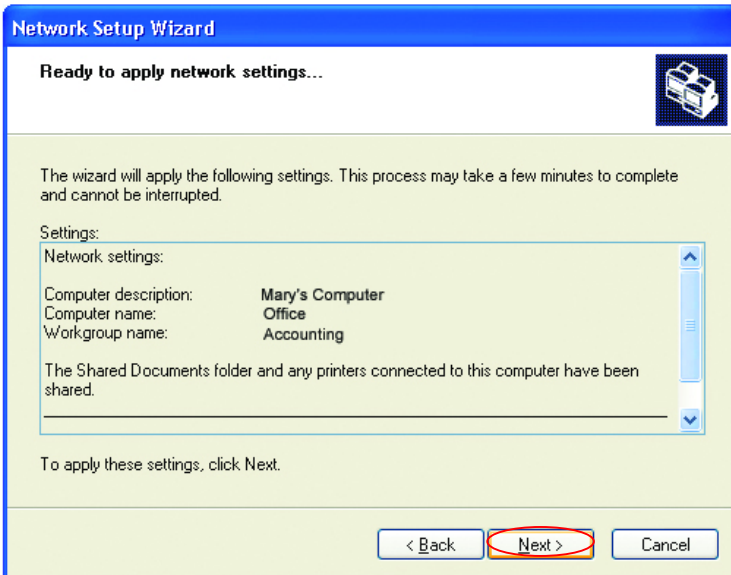


When the changes are complete, click **Next**.

Please wait while the **Network Setup Wizard** configures the computer. This may take a few minutes.

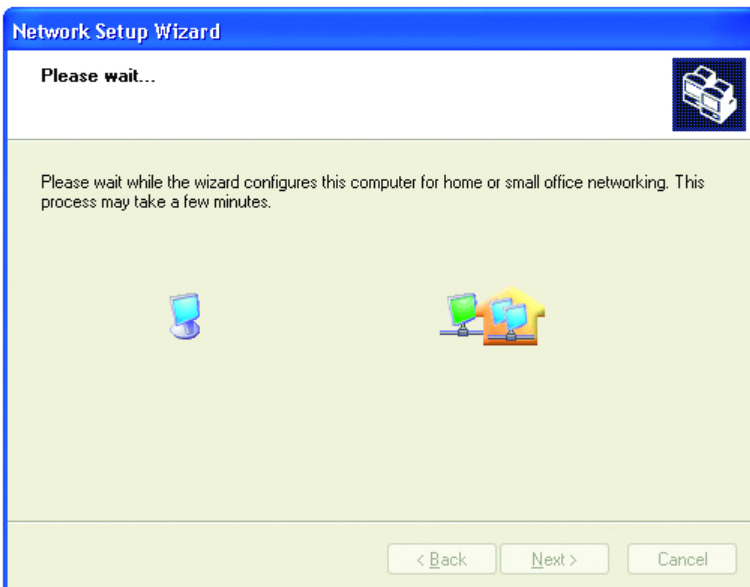

Networking Basics

In the window below, select the best option. In this example, **Create a Network Setup Disk** has been selected. You will run this disk on each of the computers on your network. Click **Next**.

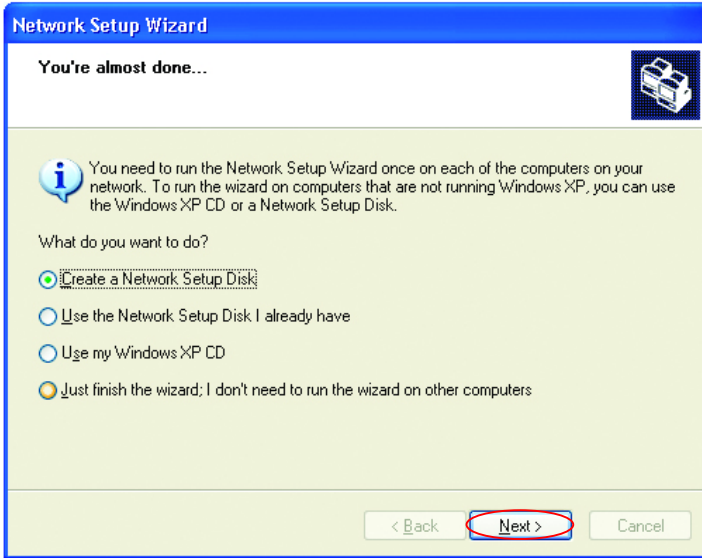


Insert a disk into the Floppy Disk Drive, in this case drive **A**.




Format the disk if you wish, and click **Next**.

Networking Basics

Please wait while the **Network Setup Wizard** copies the files.

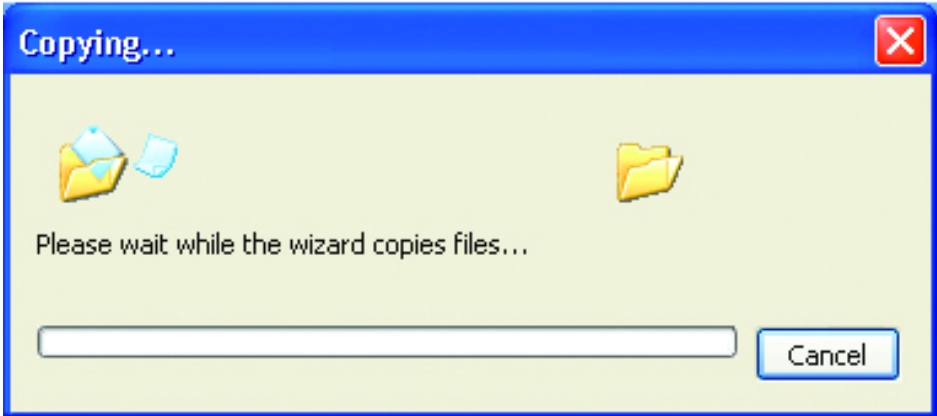


Please read the information under **Here's how** in the screen below. After you complete the **Network Setup Wizard** you will use the **Network Setup Disk** to run the **Network Setup Wizard** once on each of the computers on your network. To continue click **Next**.

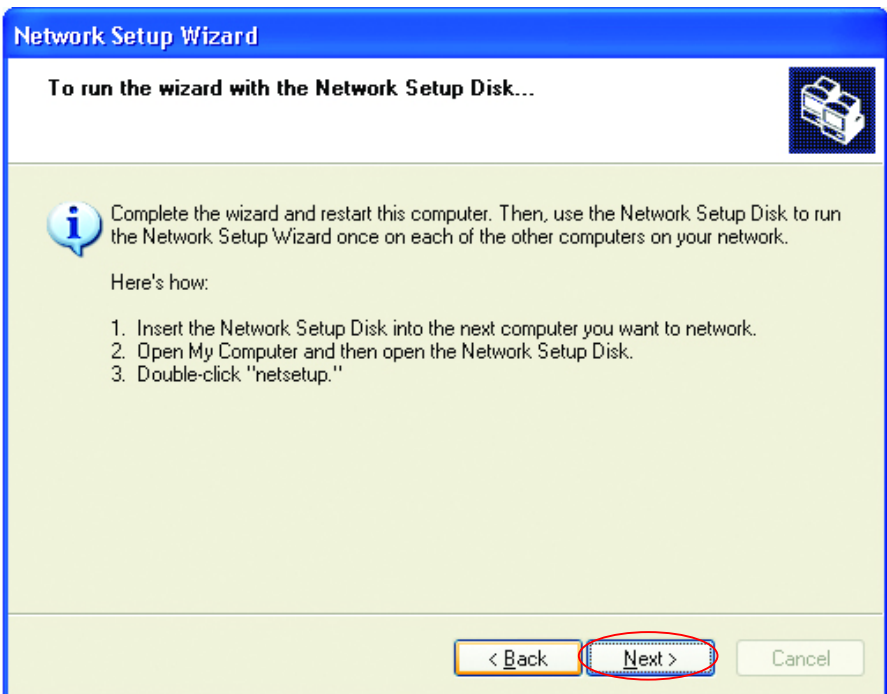


Networking Basics

Please read the information on this screen, then click **Finish** to complete the **Network Setup Wizard**.

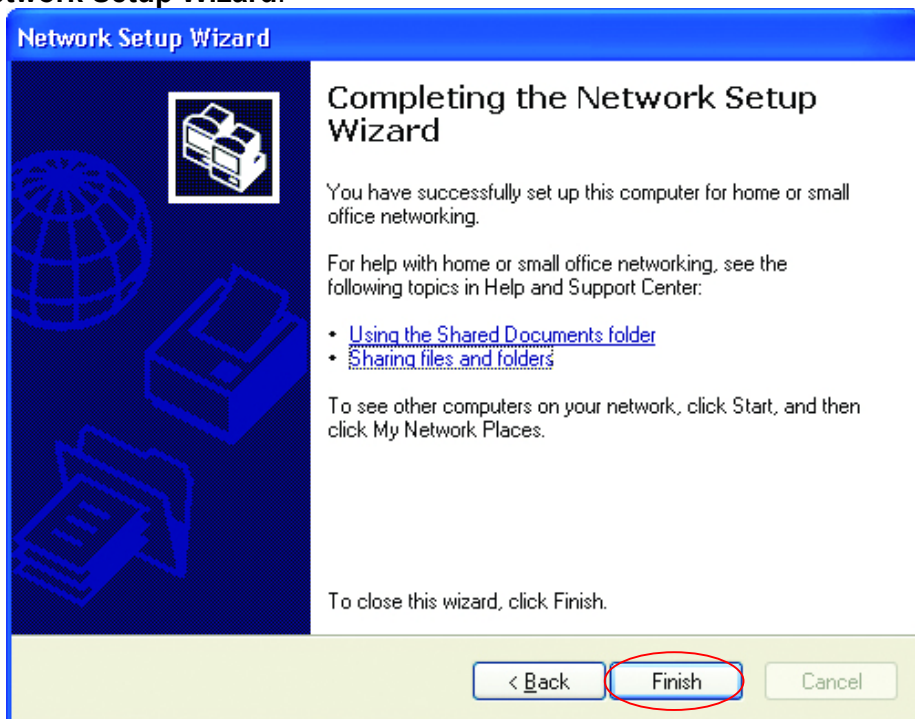

The new settings will take effect when you restart the computer. Click **Yes** to restart the computer.

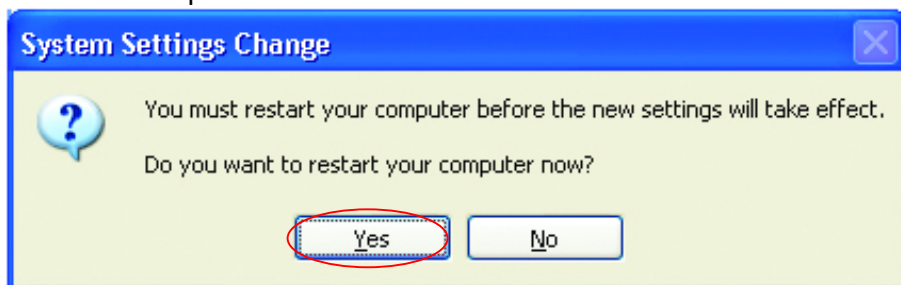

You have completed configuring this computer. Next, you will need to run the **Network Setup Disk** on all the other computers on your network. After running the **Network Setup Disk** on all your computers, your new wireless network will be ready to use.


Networking Basics

Naming your Computer

To name your computer, please follow these directions:

In **Windows XP**:

- Click **Start** (in the lower left corner of the screen)
- **Right-click** on **My Computer**
- Select **Properties** and click

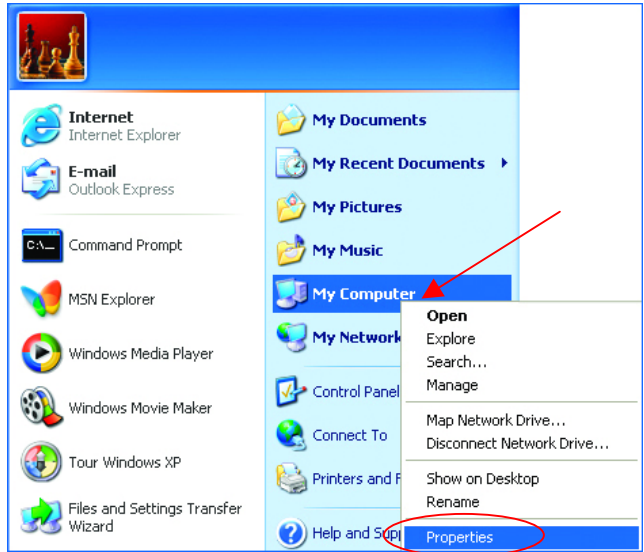


- Select the **Computer Name Tab** in the **System Properties** window.

*You may enter a **Computer description** if you wish, this field is optional.*

To rename the computer and join a domain,


- Click **Change**

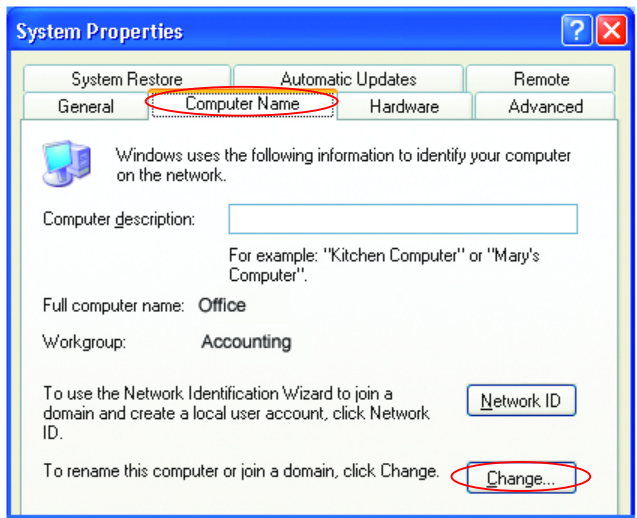

Networking Basics


Naming your Computer

- In this window, enter the **Computer name**.
- Select **Workgroup** and enter the name of the **Workgroup**.
- All computers on your network must have the same **Workgroup** name.
- Click **OK**

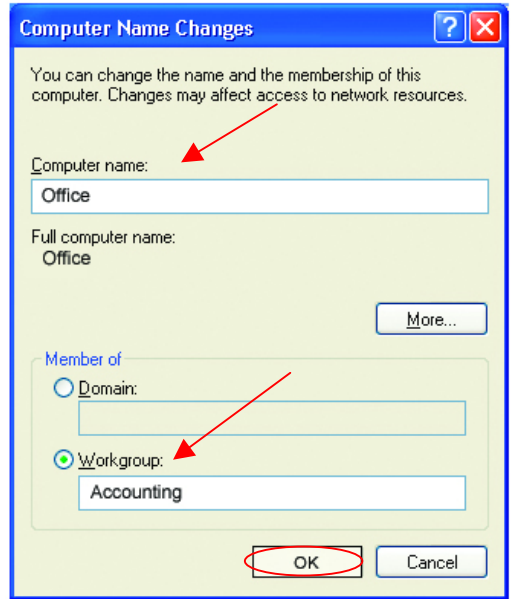

Checking the IP Address in Windows XP/2000


Go to **Start > All Programs > Accessories > Command Prompt**

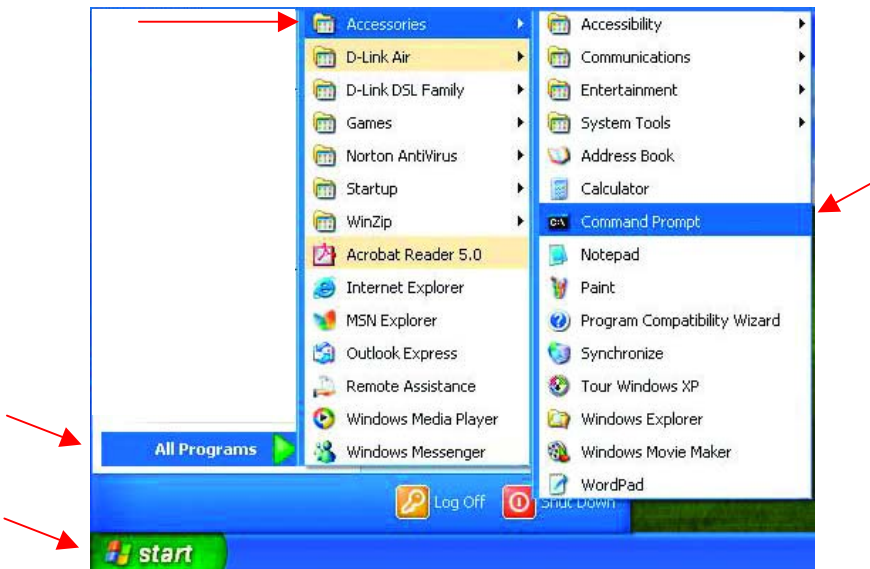

Networking Basics

Checking the IP Address in Windows XP/2000


Type Command

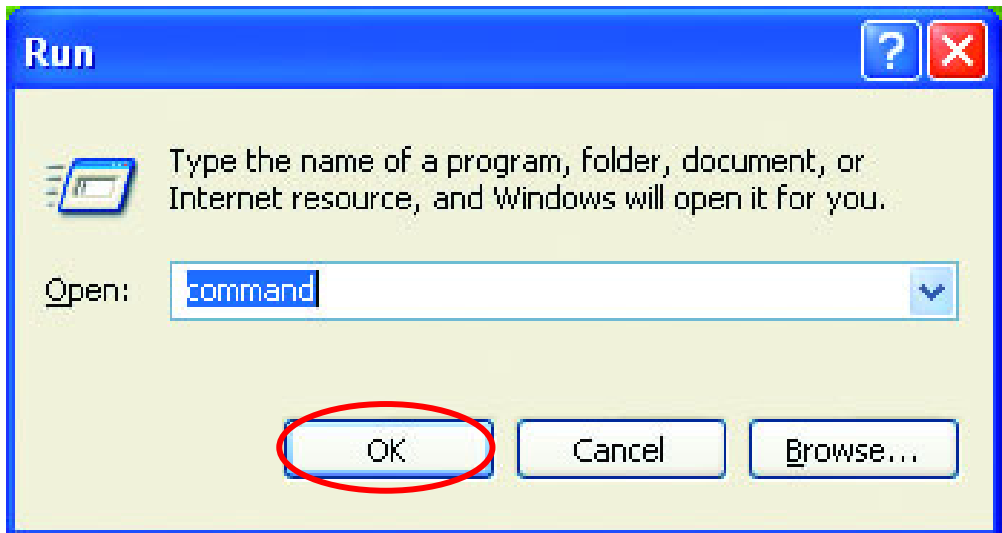

Click **OK**

Checking the IP Address in Windows XP/2000


Type **ipconfig /all** at the prompt. Click **Enter**. All the configuration settings are displayed as shown below.

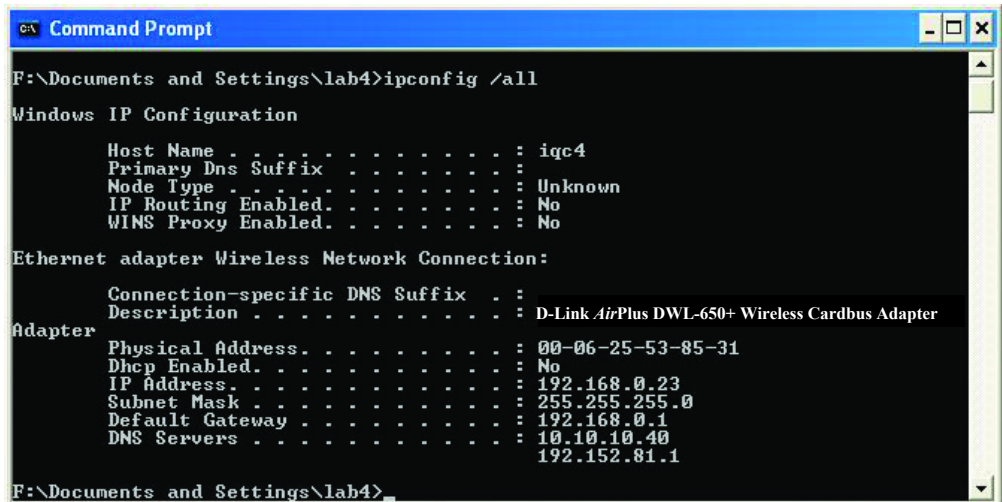

Networking Basics

Checking the IP Address in Windows XP/2000

Type **ipconfig /renew** at the prompt to get a new IP Address. Click **Enter**. The new IP Address is shown below.

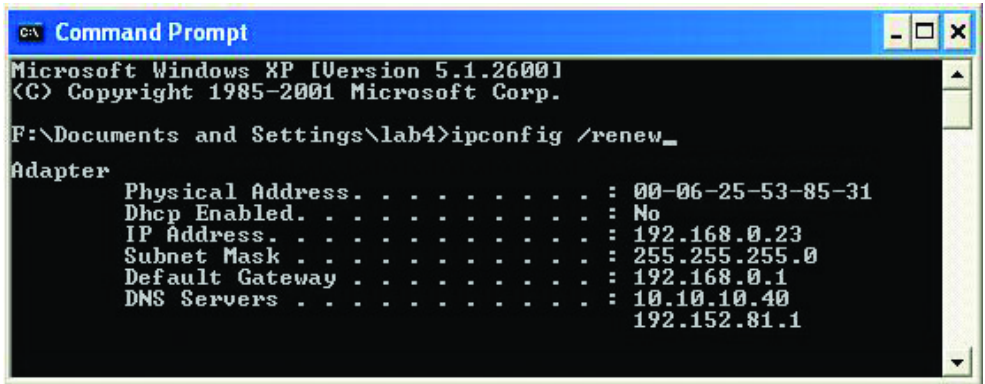

```
Command Prompt
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

F:\Documents and Settings\lab4>ipconfig /renew_

Adapter
Physical Address. . . . . : 00-06-25-53-85-31
Dhcp Enabled. . . . . : No
IP Address. . . . . : 192.168.0.23
Subnet Mask . . . . . : 255.255.255.0
Default Gateway . . . . . : 192.168.0.1
DNS Servers . . . . . : 10.10.10.40
                       192.152.81.1
```


(Windows 98/ME users: go to **Start > Run**. Type **Command**. Type **winipcfg** at the prompt. Click **Release and Renew** to obtain a new IP Address.)

Assigning a Static IP Address

Note: Residential Gateways/Broadband Routers will automatically assign IP Addresses to the computers on the network, using DHCP (Dynamic Host Configuration Protocol) technology. If you are using a DHCP-capable Gateway/Router you will not need to assign Static IP Addresses.

If you are not using a DHCP capable Gateway/Router, or you need to assign a Static IP Address, please follow these instructions:


- Go to **Start**
- **Double-click** on **Control Panel**

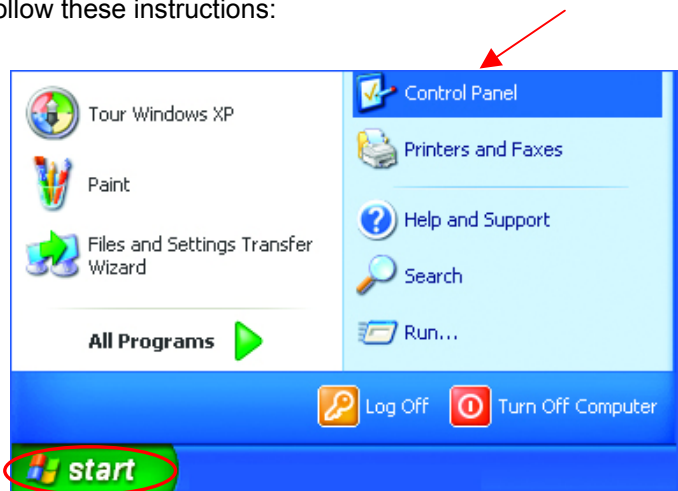


Networking Basics

Assigning a Static IP Address

- **Double-click on Network Connections**

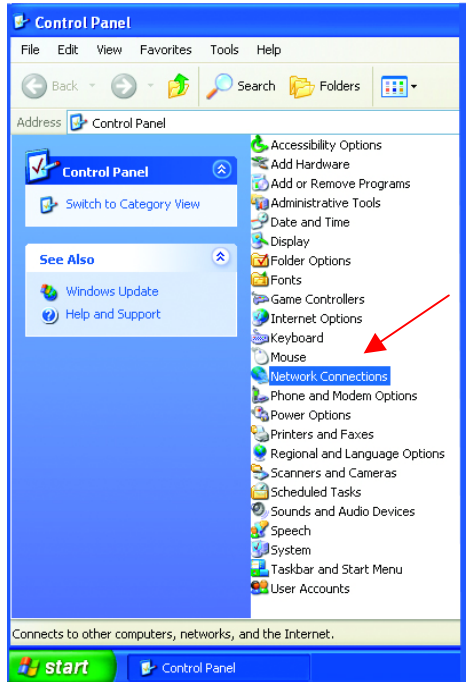



- **Right-click on Local Area Connections.**
- **Double-click Properties**

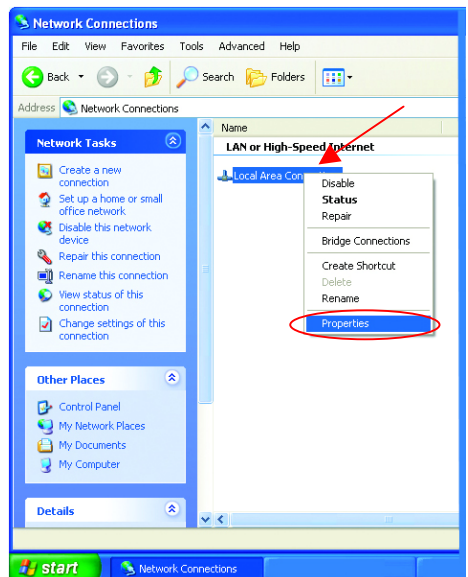

Networking Basics

Assigning a Static IP Address

- Highlight **Internet Protocol (TCP/IP)**
- Click **Properties**
- **Select Use the following IP address** in the **Internet Protocol (TCP/IP) Properties** window,
- Input your **IP address and subnet mask**. (The IP Addresses on your network must be within the same range. For example, if one computer has an IP Address of 192.168.0.2, the other computers should have IP Addresses that are sequential, like 192.168.0.3 and 192.168.0.4. The subnet mask must be the same for all the computers on the network.)
- Input your **DNS server addresses**. (Note: If you are entering a DNS server, you must enter the IP Address of the Default Gateway.)

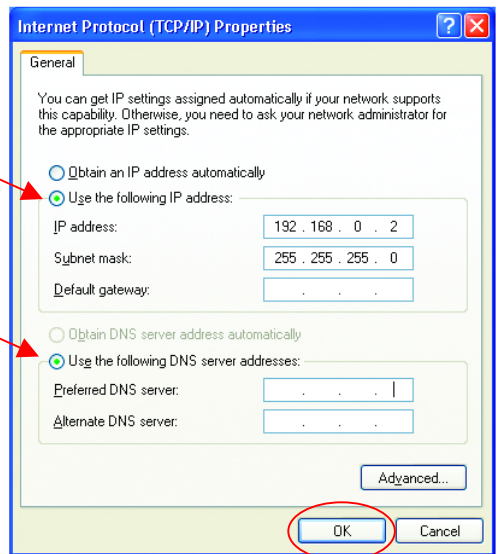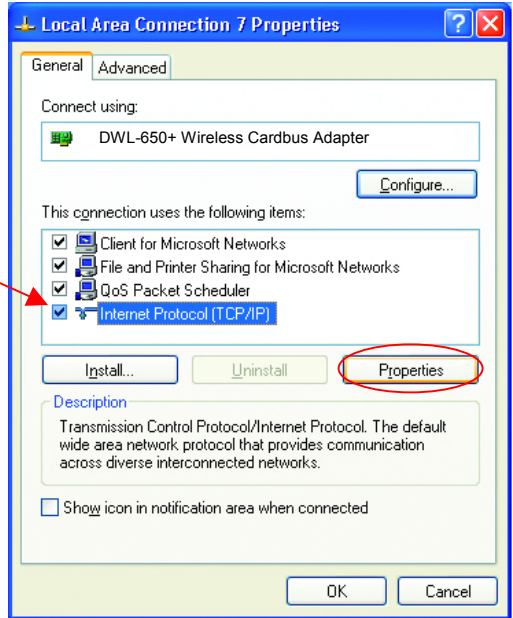

The DNS server information will be provided by your ISP (Internet Service Provider.)

- Click **OK**
You have completed the assignment of a Static IP Address. (You do not need to assign a Static IP Address if you have a DHCP-capable Gateway/Router.)


Networking Basics

Connecting to a Wireless Network in Windows XP

To be able to connect to a wireless network, make sure the proper network settings are configured for DWL-650+.

Go to **Start** > right-click on **My Network Places** >

select **Properties** > double-click on the **Wireless Network Connection** associated with the DWL-650+ > select **Properties** > select **Internet Protocol (TCP/IP)** > click **Properties**

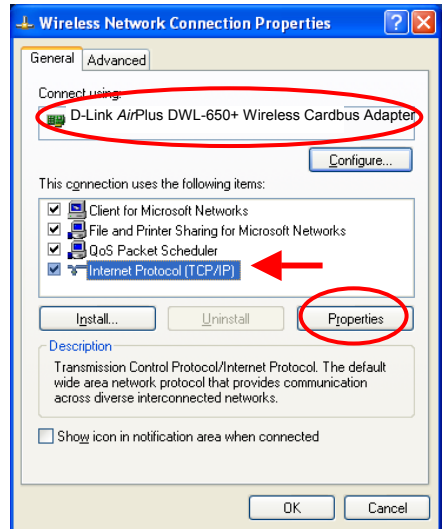


Connecting to a Wireless Network with a Wireless Router or an Access Point using a DHCP server in Windows XP.

Select **Obtain an IP address automatically** - if the Wireless Router or Access Point has DHCP server enabled

Select **Obtain DNS server address automatically**.

Click **OK**

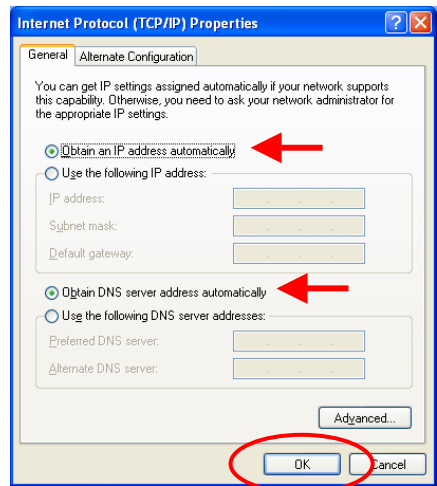

Networking Basics

Connecting to a Wireless Network

Connecting to a Wireless Network with a Wireless Router or an Access Point using a static IP address in Windows XP.

Select **Use the following IP address** - if the Wireless Router or Access Point **does not** have a DHCP server enabled.


Input a static IP address within the same range as the Wireless Router or Access Point.

IP address: 192.168.0.51

Subnet mask: 255.255.255.0


Default Gateway: Enter the LAN IP address of the Wireless Router

Select **Use the following DNS server address**. Enter the LAN IP address of the Wireless Router.
Click **OK**

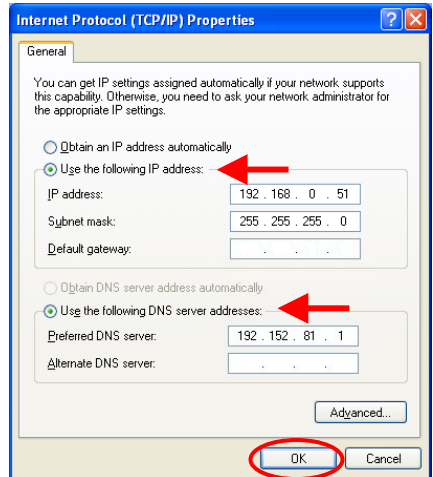

Connecting to a Wireless Network in Windows 2000

Go to **Start > Settings > Network and Dial-up Connections** > Double click on the **Local Area Connection** associated with the DWL-650+ > select **Properties** > select **Internet Protocol (TCP/IP)** > click **Properties**

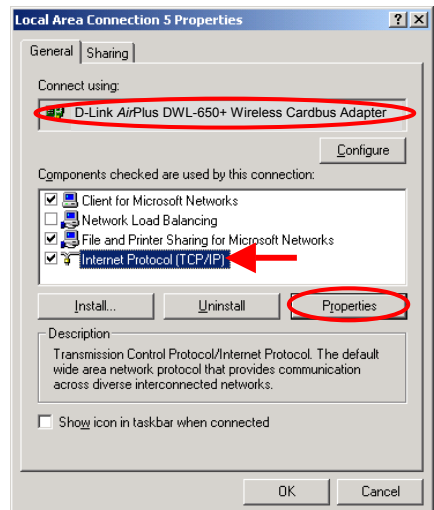

Networking Basics


Connecting to a Wireless Network

Connecting to a Wireless Network with a Wireless Router or an Access Point using a DHCP server in Windows 2000.

Select **Obtain an IP address automatically**.

Select **Obtain DNS server address automatically**.

Click **OK**

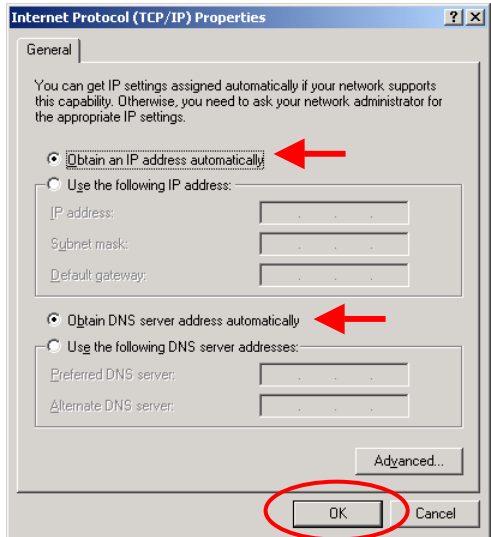

Connecting to a Wireless Network with a Wireless Router or an Access Point using a static IP address in Windows 2000.

Select **Use the following IP address**

Input a static IP Address within the same IP Address range as the wireless router or the access point.


IP address: 192.168.0.51

Subnet mask: 255.255.255.0

Default Gateway: Enter the LAN IP address of the Wireless Router

Select **Use the following DNS server address**. Leave this section blank.

Click **OK**

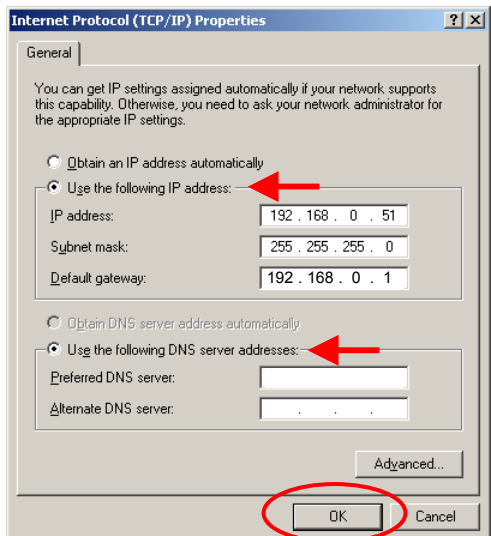


Networking Basics

Connecting to a Wireless Network

Connecting to a Wireless Network in Windows Me and 98

Go to **Start > Settings > Control Panel > Double-click on the Network associated with the DWL-650+ > click Properties > select Internet Protocol (TCP/IP) > click Properties**

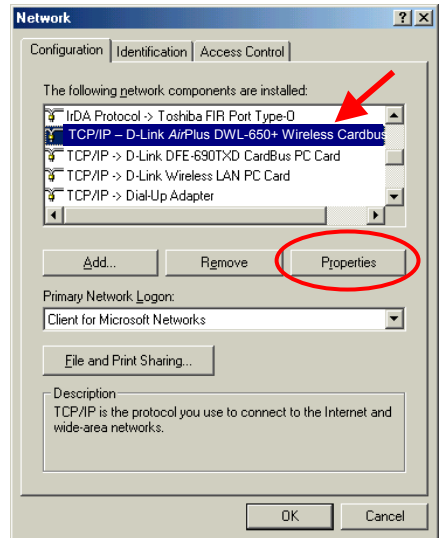


Connecting to a Wireless Network with a Wireless Router or an Access Point using a DHCP server in Windows Me and 98.

Select the **IP Address** tab. Then, select **Obtain an IP address automatically.**

Select **Detect connection to network media.**

Click **OK**

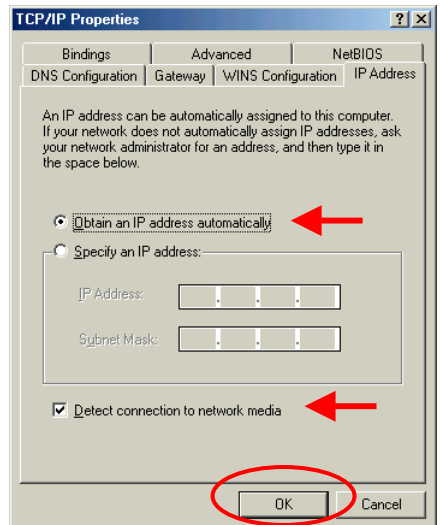

Networking Basics

Connecting to a Wireless Network

Connecting to a Wireless Network with a Wireless Router or Access Point using a static IP address in Windows Me or Windows 98.

Select **Specify an IP address**.


Input a static IP address within the same IP Address range as the wireless router or access point.

IP address: 192.168.0.51

Subnet mask: 255.255.255.0

Select **Detect connection to network media**.

Click **OK**

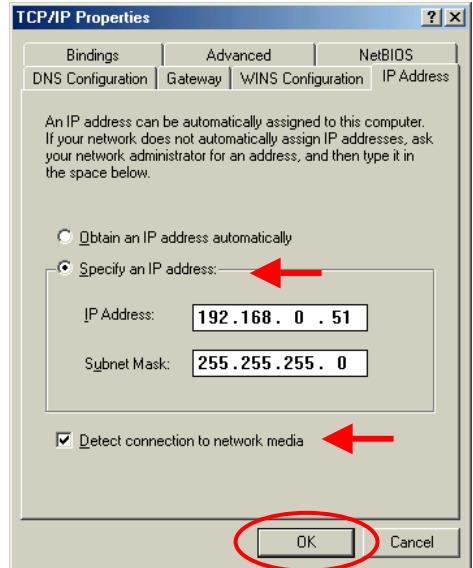

Checking the Wireless Connection by Pinging For Windows XP and 2000:

Go to **Start > Run > type cmd**. A window similar to *Fig. 9.25* will appear. Type **ping xxx.xxx.xxx.xxx**, where **xxx** is the **IP address** of the Wireless Router or Access Point.

A good wireless connection will show four replies from the wireless router or access point, as shown.

```
cx F:\WINDOWS\System32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.
F:\Documents and Settings\lab4>ping 192.168.0.50
Pinging 192.168.0.50 with 32 bytes of data:
Reply from 192.168.0.50: bytes=32 time=5ms TTL=30
Reply from 192.168.0.50: bytes=32 time=64ms TTL=30
Reply from 192.168.0.50: bytes=32 time=3ms TTL=30
Reply from 192.168.0.50: bytes=32 time=17ms TTL=30


Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 3ms, Maximum = 64ms, Average = 22ms
F:\Documents and Settings\lab4>
```

Networking Basics

Checking the Wireless Connection by Pinging

For Windows Me and 98:

Go to **Start > Run > type command**. A window similar to *Fig. 9.26* will appear. Type **ping xxx.xxx.xxx.xxx**, where **xxx** is the **IP address** of the Wireless Router or Access Point. A good wireless connection will show four replies from the wireless router or access point, as shown.

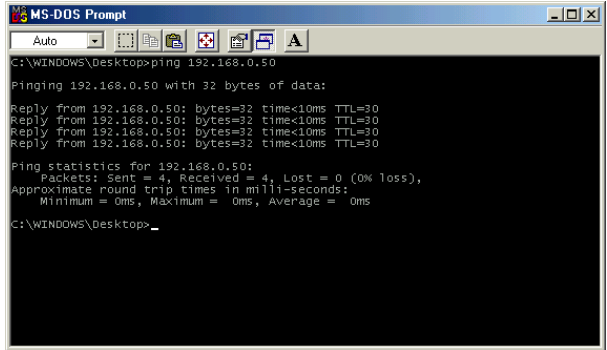

```
MS-DOS Prompt
Auto
C:\WINDOWS\Desktop>ping 192.168.0.50
Pinging 192.168.0.50 with 32 bytes of data:
Reply from 192.168.0.50: bytes=32 time<10ms TTL=30
Reply from 192.168.0.50: bytes=32 time<10ms TTL=30
Reply from 192.168.0.50: bytes=32 time<10ms TTL=30
Reply from 192.168.0.50: bytes=32 time<10ms TTL=30

Ping statistics for 192.168.0.50:
    Packets: Sent = 4, Received = 4, Lost = 0 (0% loss),
    Approximate round trip times in milli-seconds:
        Minimum = 0ms, Maximum = 0ms, Average = 0ms
C:\WINDOWS\Desktop>
```

Adding and Sharing Printers in Windows XP

After you have run the **Network Setup Wizard** on all the computers in your network (please see the **Network Setup Wizard** section at the beginning of **Networking Basics**.) you can use the **Add Printer Wizard** to add or share a printer on your network.

Whether you want to add a **local printer** (a printer connected directly to one computer,) share an **LPR printer** (a printer connected to a print server) or share a **network printer** (a printer connected to your network through a Gateway/Router,) use the **Add Printer Wizard**. Please follow the directions below:

First, make sure that you have run the Network Setup Wizard on all of the computers on your network.

We will show you 3 ways to use the **Add Printer Wizard**

1. Adding a local printer
2. Sharing an network printer
3. Sharing an LPR printer


Networking Basics

Adding a local printer


(A printer connected directly to a computer)

A printer that is not shared on the network and is connected directly to one computer is called a **local printer**. If you do not need to share your printer on a network, follow these directions to add the printer to one computer.

- Go to **Start> Printers and Faxes**

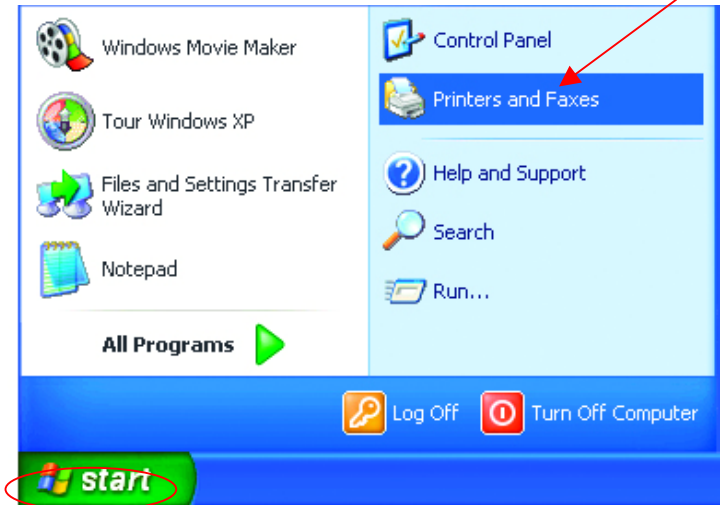


- Click on **Add a printer**

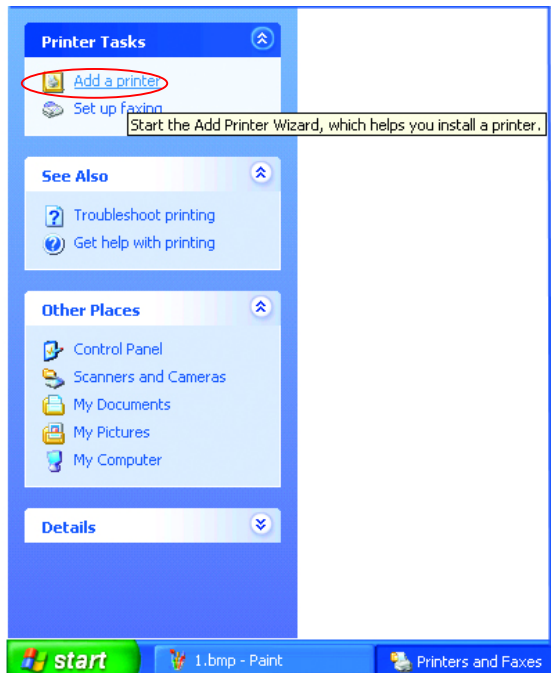


Networking Basics

Adding a local printer

- Click **Next**

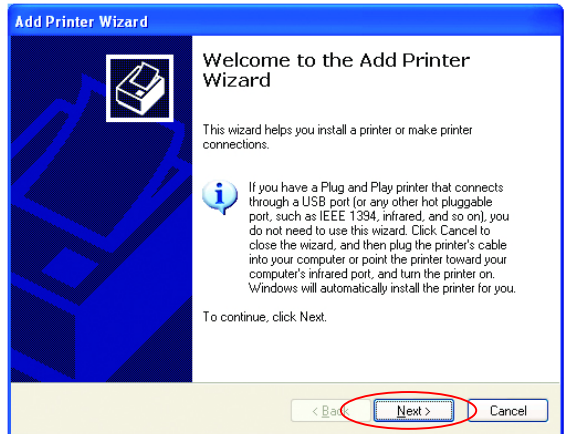

- Select **Local printer attached to this computer**
- *(Deselect **Automatically detect and install my Plug and Play printer** if it has been selected.)*

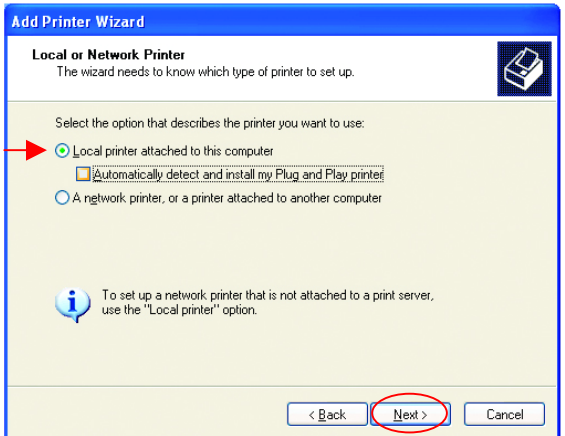


- Click **Next**

- Select **Use the following port:**
- From the pull-down menu **select the correct port** for your printer

*(Most computers use the **LPT1:** port, as shown in the illustration.)*

- Click **Next**

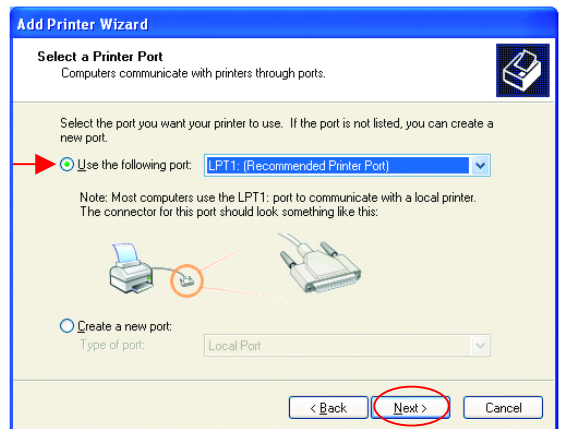


Networking Basics


Adding a local printer

- Select and highlight the **correct driver** for your printer.
- Click **Next**

*(If the correct driver is not displayed, insert the CD or floppy disk that came with your printer and click **Have Disk.**)*

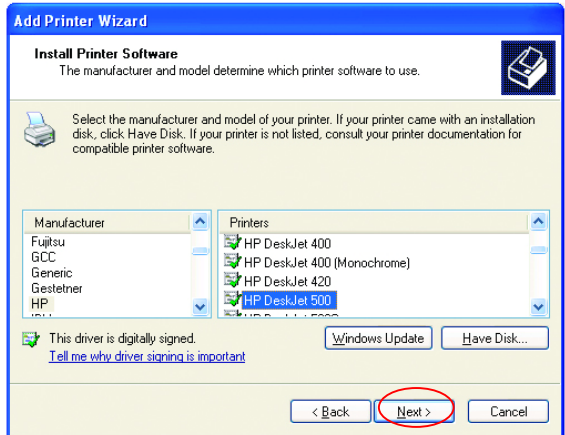


- At this screen, you can change the name of the printer (optional.)

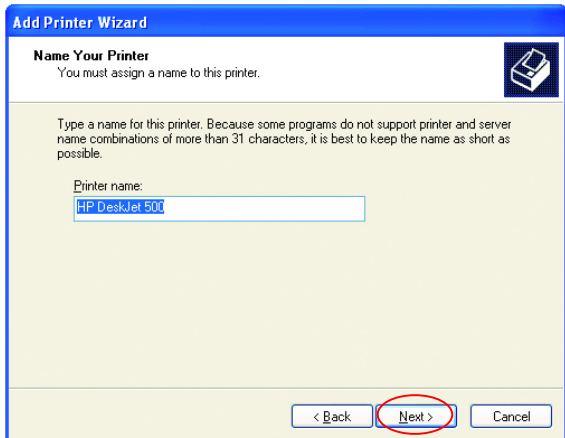

- Click **Next**

- Select **Yes**, to print a test page. A successful printing will confirm that you have chosen the correct driver.

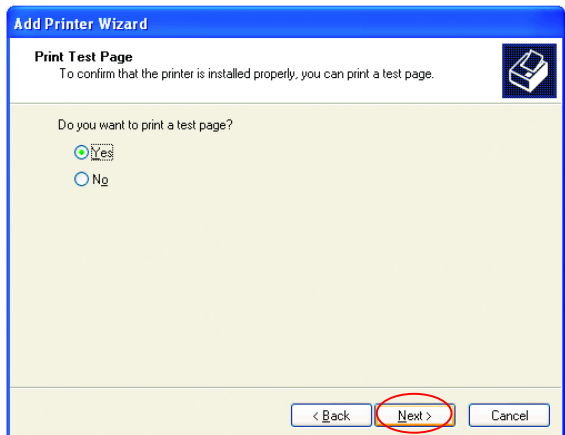


- Click **Next**

Networking Basics


Adding a local printer

This screen gives you information about your printer.

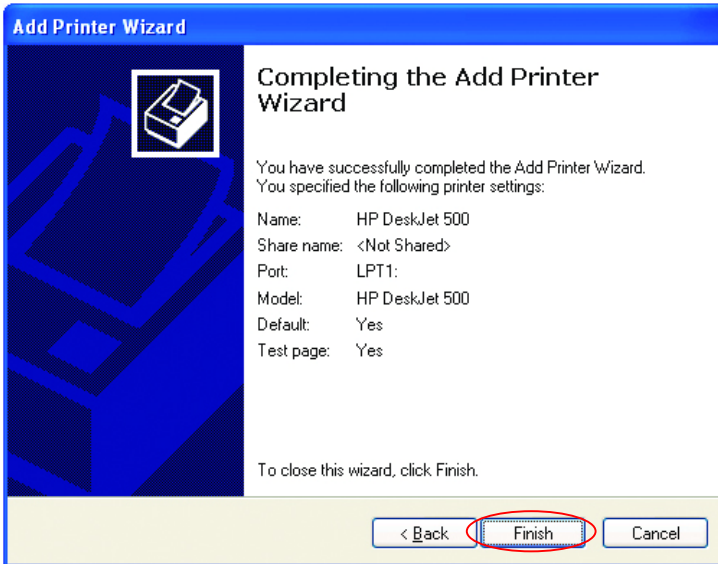

Click **Finish**

When the test page has printed,

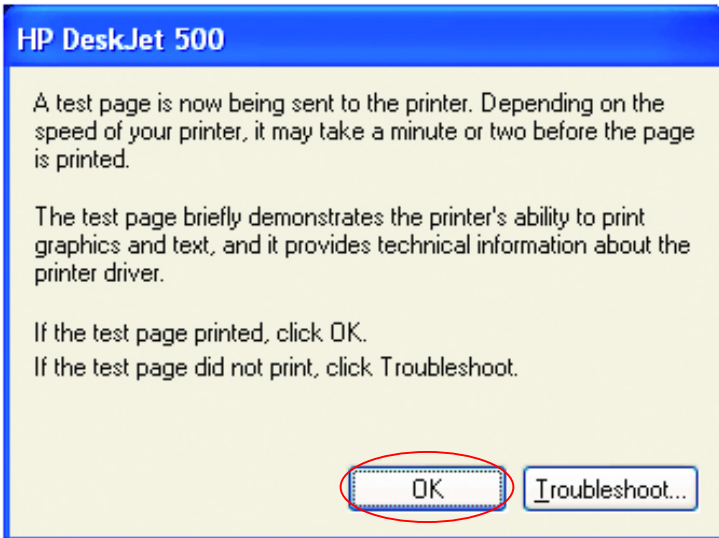

Click **OK**


Networking Basics

Adding a local printer

- Go to **Start> Printers and Faxes**

A successful installation will display the printer icon as shown at right.


You have successfully added a local printer.

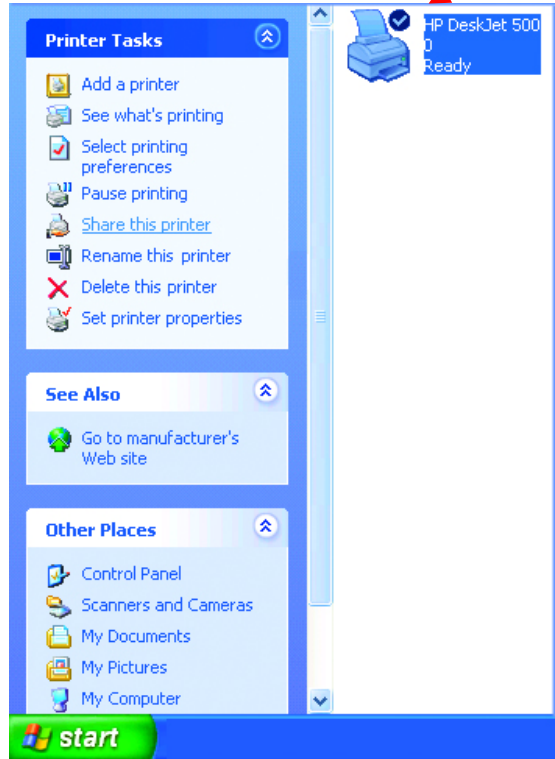

Sharing a network printer

After you have run the **Network Setup Wizard** on all the computers on your network, you can run the **Add Printer Wizard** on all the computers on your network. Please follow these directions to use the **Add Printer Wizard** to share a printer on your network:


- Go to **Start> Printers and Faxes**

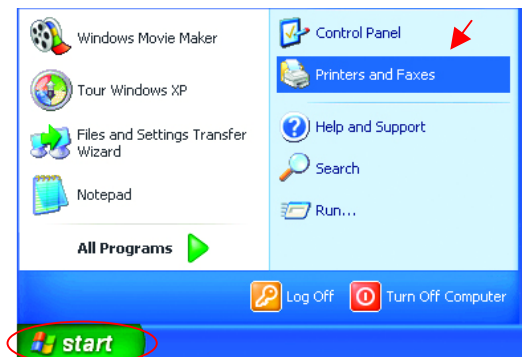


Networking Basics

Sharing a network printer


- Click on **Add a Printer**

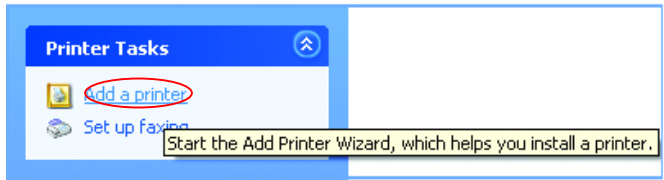

- Click **Next**

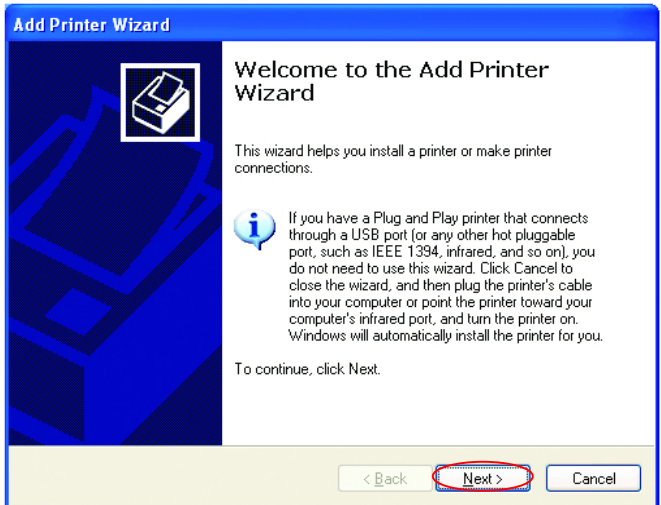


- Select **Network Printer**
- Click **Next**

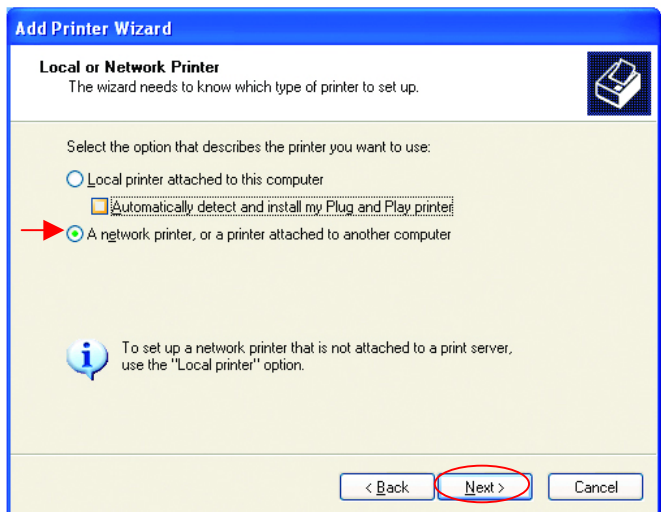

Networking Basics


Sharing a network printer

- Select **Browse for a printer**

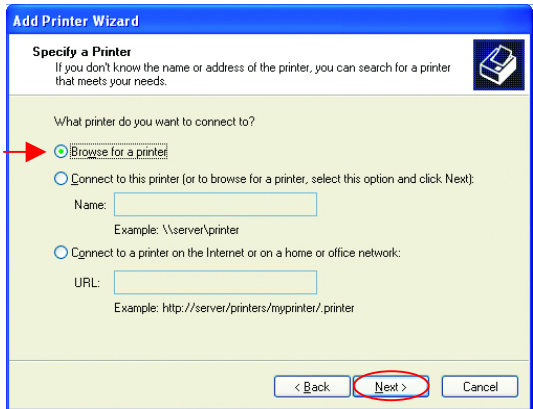


- Click **Next**

- Select the **printer** you would like to share.

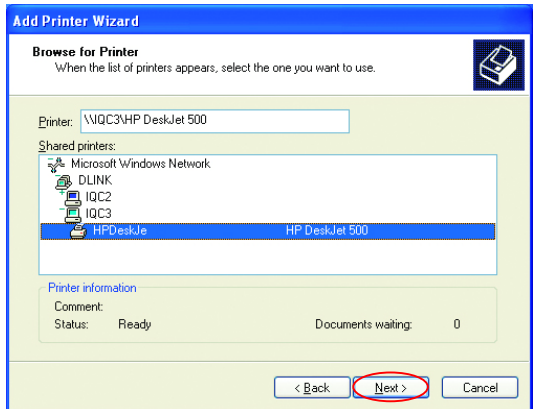

- Click **Next**

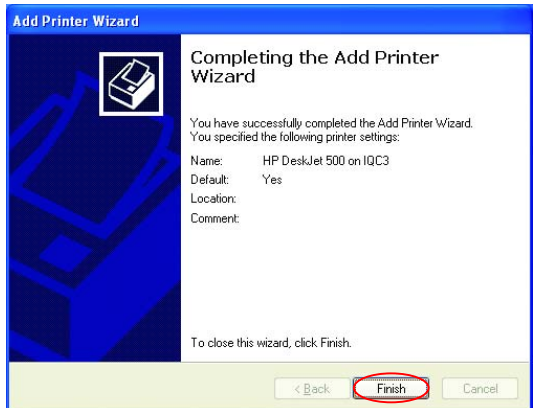


- Click **Finish**

Networking Basics

Sharing a network printer

To check for proper installation:

- Go to **Start**>
Printers and Faxes

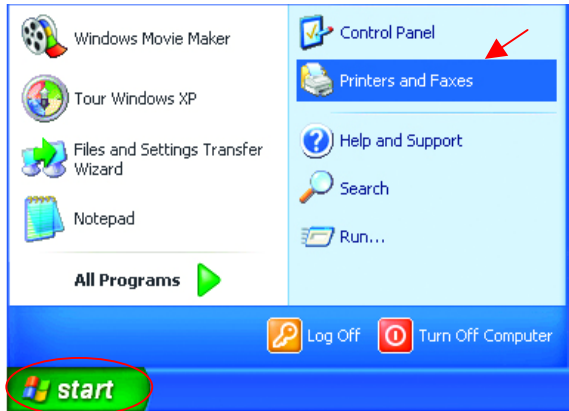


The printer icon will appear at right, indicating proper installation.

You have completed adding the printer.

To share this printer on your network:

- Remember the **printer name**
- Run the **Add Printer Wizard** on all the computers on your network.
- Make sure you have already run the **Network Setup Wizard** on all the network computers.

After you run the **Add Printer Wizard** on all the computers in the network, you can share the printer.

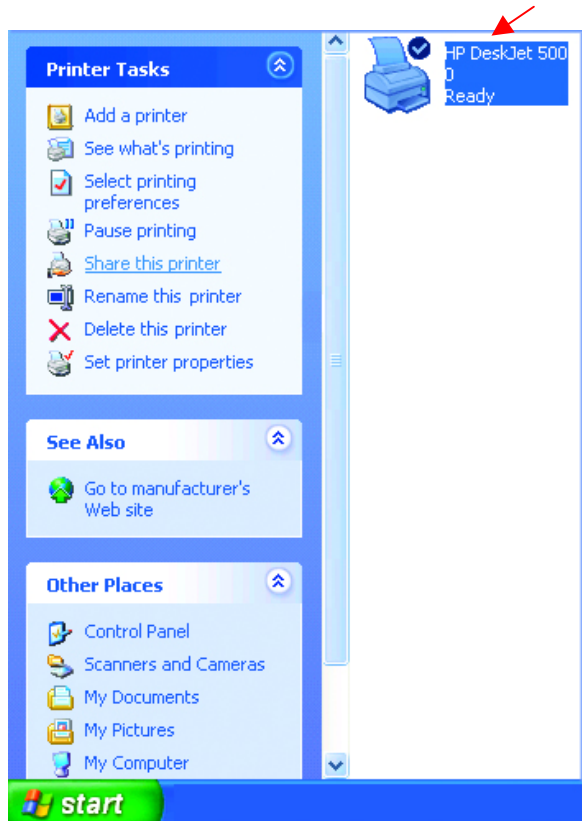

Networking Basics


Sharing an LPR printer

To share an **LPR printer** (using a print server,) you will need a Print Server such as the **DP-101P+**. Please make sure that you have run the **Network Setup Wizard** on all the computers on your network. To share an **LPR printer**, please follow these directions:

- Go to **Start > Printers and Faxes**
- Click on **Add a Printer**


The screen to the right will display.

- Click **Next**

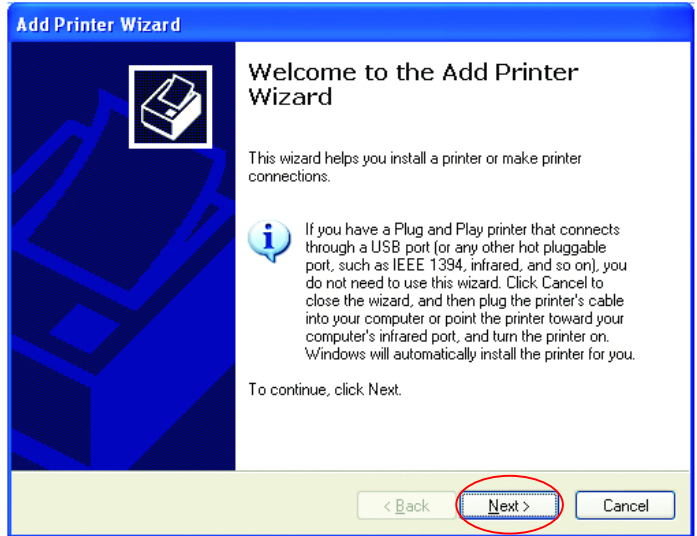

- Select **Local printer...**


- Click **Next**

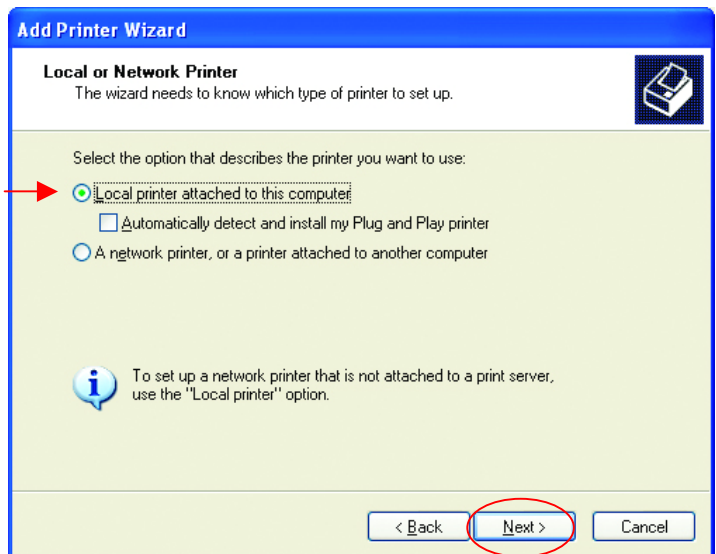

Networking Basics


Sharing an LPR printer

- Select **Create a new port**
- From the pull-down menu, select **Standard TCP/IP Port**, as shown.

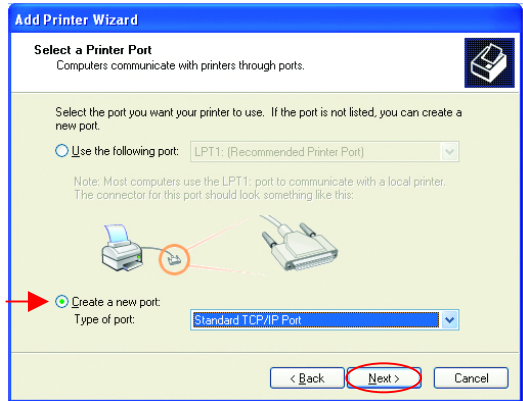


- Click **Next**

- Please read the instructions on this screen.

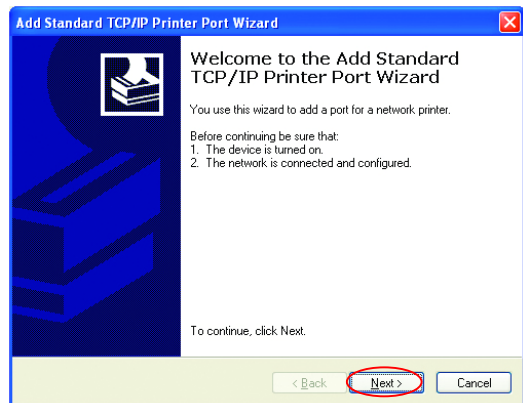

- Click **Next**

- Enter the **Printer IP Address** and the **Port Name**, as shown.

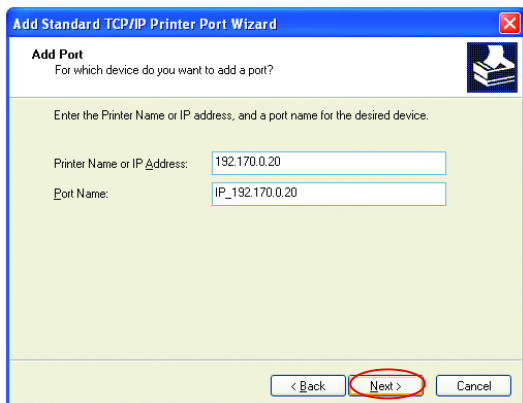


- Click **Next**

Networking Basics


Sharing an LPR printer

- In this screen, select **Custom**.

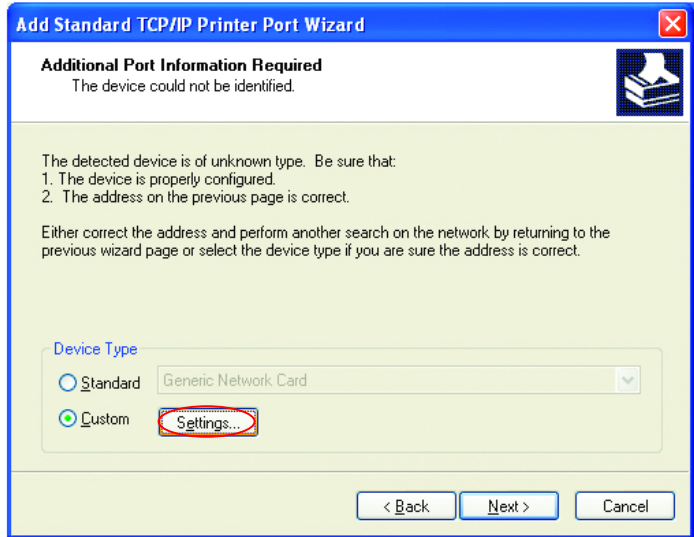

- Click **Settings**

- Enter the **Port Name** and the **Printer Name** or **IP Address**.

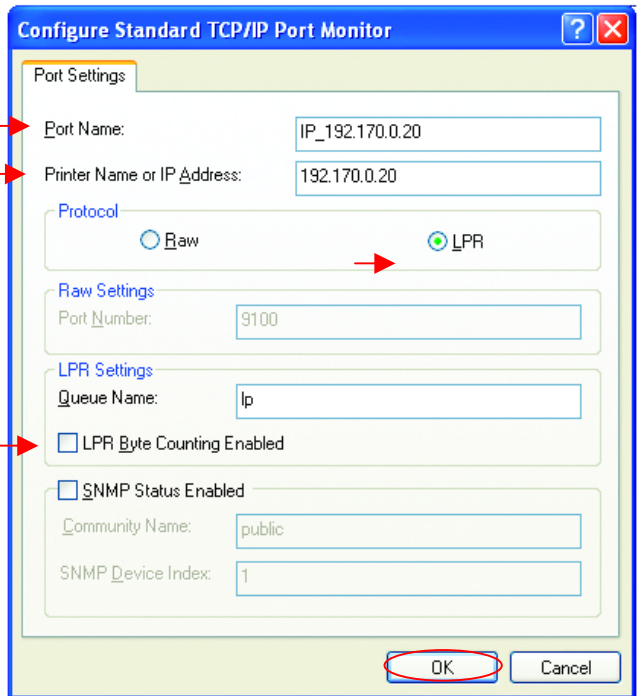

- Select **LPR**


- Enter a **Queue Name** (if your Print-Server/ Gateway has more than one port, you will need a **Queue name**.)

- Click **OK**


Networking Basics

Sharing an LPR printer

- This screen will show you information about your printer.
- Click **Finish**

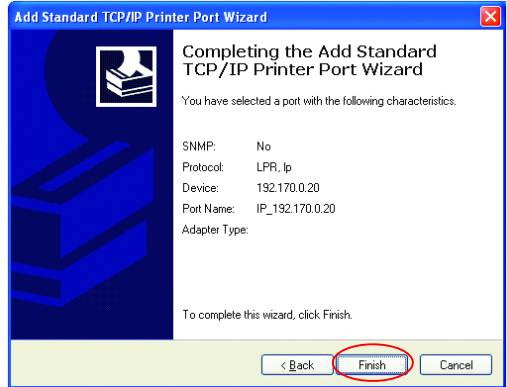


- Select the **printer** you are adding from the list of **Printers**.
- Insert the printer driver disk that came with your printer.
- Click **Have Disk**

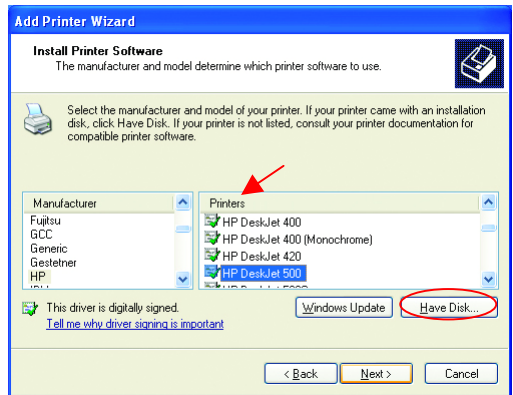

If the printer driver is already installed,

- Select **Keep existing driver**
- Click **Next**

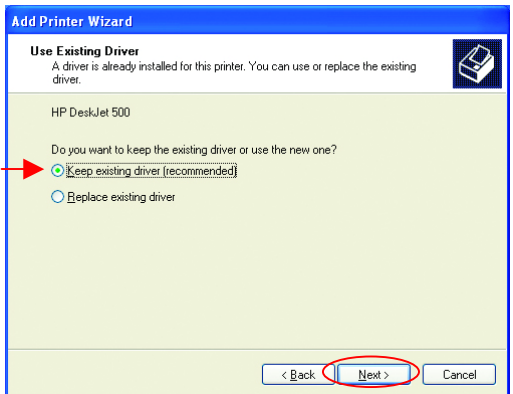

Networking Basics

Sharing an LPR printer

- You can rename your printer if you choose. It is optional.




*Please remember the name of your printer. You will need this information when you use the **Add Printer Wizard** on the other computers on your network.*

- Click **Next**
- Select **Yes**, to print a test page.

- Click **Next**

This screen will display information about your printer.

- Click **Finish** to complete the addition of the printer.
- Please run the **Add Printer Wizard** on all the computers on your network in order to share the printer.

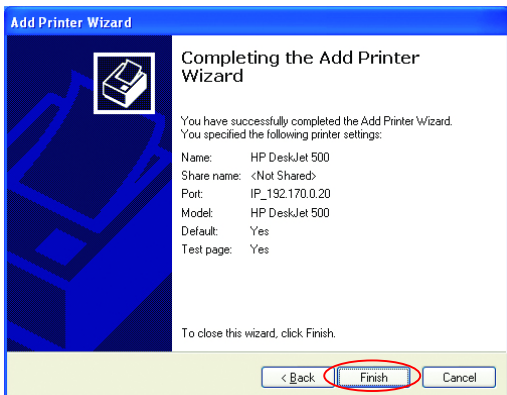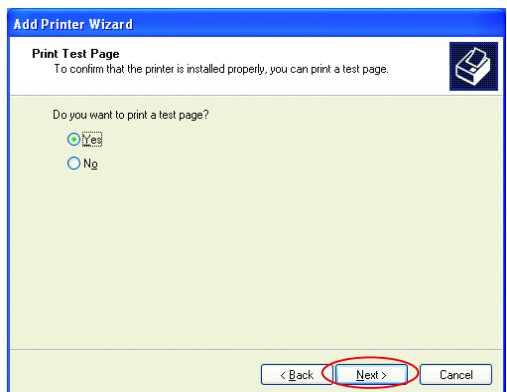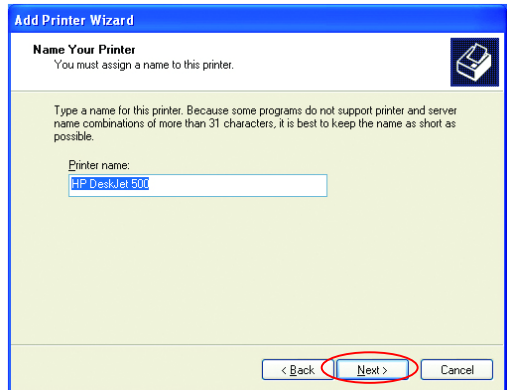

Note: You must run the **Network Setup Wizard** on all the computers on your network before you run the **Add Printer Wizard**.

Networking Basics

Other Tasks

For help with other tasks in home or small office networking, see **Using the Shared Documents** folder and **Sharing files and folders** in the **Help and Support Center** in Microsoft Windows XP.

8. Technical Specifications

Standards

- IEEE 802.11b • IEEE 802.3
- IEEE 802.3u • IEEE 802.3

VPN Pass Through / Multi-Sessions

- PPTP
- L2TP
- IPSec

Advanced Firewall Features

Device Management

Web-Based – Internet Explorer v5 or later; Netscape Navigator v4 or later; or other Java- enabled browsers.

Wireless Data Rates

With Automatic Fallback

- 22Mbps • 11Mbps
- 5.5Mbps • 2Mbps
- 1Mbps

Encryption

64/128/256-bit RC4

Media Access Control

CMSA/CA with ACK

Wireless Frequency Range

2.4GHz to 2.462GHz

Wireless Operating Range

Indoors: Up to 328 feet
(100 meters)

Outdoors: Up to 1,312 feet
(400 meters)

Wireless Modulation Technology

PBCC - Packet Binary
Convolutional Coding
Direct Sequence Spread
Spectrum (DSSS)
11-chip Barker sequence

Modulation Techniques

- Barker (1Mbps/0db)
- Barker (2Mbps/3db)
- CCK (5.5Mbps/5.5db)
- PBCC (5.5 Mbps/1.5db)
- CCK (11Mbps/8.5db)
- PBCC (11Mbps/4.5db)
- PBCC (22Mbps/8.5db)

Wireless Transmit Power

15dBm \pm 2dB

External Antenna Type

Dual detachable reverse SMA

LEDs

- Power
- M1
- M2
- WAN
- Local Network—10/100
- WLAN (Wireless Connection)

Operating Temperature

32°F to 131°F (0°C to 55°C)

Humidity

95% maximum (non-condensing)

Power Input

Ext. Power Supply DC 5V, 2.0A

Safety & Emissions

- FCC
- UL

Dimensions

- L = 9.25 inches (233mm)
- W = 6.5 inches (165mm)
- H = 1.375 inches (35mm)

Weight

~2.0 lbs (907g)

9. Contacting Technical Support

You can find the most recent software and user documentation on the D-Link website.

D-Link provides free technical support for customers within the United States for the duration of the warranty period on this product.

U.S. customers can contact D-Link technical support through our web site, or by phone.

D-Link Technical Support over the Telephone:

(877) 453-5465

24 hours a day, seven days a week.

D-Link Technical Support over the Internet:

<http://support.dlink.com>

When contacting technical support, please provide the following information:

- *Serial number of the unit*
- *Model number or product name*
- *Software type and version number*

10. Warranty and Registration

D-Link Systems, Inc. ("D-Link") provides this 3-Year warranty for its product only to the person or entity who originally purchased the product from:

- D-Link or its authorized reseller or distributor.
- Products purchased and delivered within the fifty United States, the District of Columbia, US Possessions or Protectorates, US Military Installations, addresses with an APO or FPO.

3-Year Limited Hardware Warranty: D-Link warrants that the hardware portion of the D-Link products described below ("Hardware") will be free from material defects in workmanship and materials from the date of original retail purchase of the Hardware, for the period set forth below applicable to the product type ("Warranty Period").

3-Year Limited Warranty for the Product(s) is defined as follows

- Hardware (excluding power supplies and fans)
- Spare parts and spare kits Ninety (90) days.

D-Link's sole obligation shall be to repair or replace the defective Hardware at no charge to the original owner. Such repair or replacement will be rendered by D-Link at an Authorized D-Link Service Office. The replacement Hardware need not be new or of an identical make, model or part; D-Link may in its discretion replace the defective Hardware (or any part thereof) with any reconditioned product that D-Link reasonably determines is substantially equivalent (or superior) in all material respects to the defective Hardware. The Warranty Period shall extend for an additional ninety (90) days after any repaired or replaced Hardware is delivered. If a material defect is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to repair or replace the defective Hardware, the price paid by the original purchaser for the defective Hardware will be refunded by D-Link upon return to D-Link of the defective Hardware. All Hardware (or part thereof) that is replaced by D-Link, or for which the purchase price is refunded, shall become the property of D-Link upon replacement or refund.

Limited Software Warranty: D-Link warrants that the software portion of the product ("Software") will substantially conform to D-Link's then current functional specifications for the Software, as set forth in the applicable documentation, from the date of original delivery of the Software for a period of ninety (90) days ("Warranty Period"), if the Software is properly installed on approved hardware and operated as contemplated in its documentation. D-Link further warrants that, during the Warranty Period, the magnetic media on which D-Link delivers the Software will be free of physical defects. D-Link's sole obligation shall be to replace the non-conforming Software (or defective media) with software that substantially conforms to D-Link's functional specifications for the Software. Except as otherwise agreed by D-Link in writing, the replacement Software is provided only to the original licensee, and is subject to the terms and conditions of the license granted by D-Link for the Software. The Warranty Period shall extend for an additional ninety (90) days after any replacement Software is delivered. If a material non-conformance is incapable of correction, or if D-Link determines in its sole discretion that it is not practical to replace the non-conforming Software, the price paid by the original licensee for the non-conforming Software will be refunded by D-Link; provided that the non-conforming Software (and all copies thereof) is first returned to D-Link. The license granted respecting any Software for which a refund is given automatically terminates.

What You Must Do For Warranty Service:

Registration is conducted via a link on our Web Site (<http://www.dlink.com/>). Each product purchased must be individually registered for warranty service within ninety (90) days after it is purchased and/or licensed.

FAILURE TO PROPERLY TO REGISTER MAY AFFECT THE WARRANTY FOR THIS PRODUCT.

Submitting A Claim. Any claim under this limited warranty must be submitted in writing before the end of the Warranty Period to an Authorized D-Link Service Office.

- The customer must submit as part of the claim a written description of the Hardware defect or Software nonconformance in sufficient detail to allow D-Link to confirm the same.
- The original product owner must obtain a Return Material Authorization (RMA) number from the Authorized D-Link Service Office and, if requested, provide written proof of purchase of the product (such as a copy of the dated purchase invoice for the product) before the warranty service is provided.
- After an RMA number is issued, the defective product must be packaged securely in the original or other suitable shipping package to ensure that it will not be damaged in transit, and the RMA number must be prominently marked on the outside of the package.
- The customer is responsible for all shipping charges to and from D-Link. (No CODs allowed). Products sent COD will become the property of D-Link Systems, Inc. Products should be fully insured by the customer and shipped to **D-Link Systems Inc., 53 Discovery Drive, Irvine CA 92618.**

D-Link may reject or return any product that is not packaged and shipped in strict compliance with the foregoing requirements, or for which an RMA number is not visible from the outside of the package. The product owner agrees to pay D-Link's reasonable handling and return shipping charges for any product that is not packaged and shipped in accordance with the foregoing requirements, or that is determined by D-Link not to be defective or non-conforming.

What Is Not Covered:

This limited warranty provided by D-Link does not cover: Products that have been subjected to abuse, accident, alteration, modification, tampering, negligence, misuse, faulty installation, lack of reasonable care, repair or service in any way that is not contemplated in the documentation for the product, or if the model or serial number has been altered, tampered with, defaced or removed; Initial installation, installation and removal of the product for repair, and shipping costs; Operational adjustments covered in the operating manual for the product, and normal maintenance; Damage that occurs in shipment, due to act of God, failures due to power surge, and cosmetic damage; and Any hardware, software, firmware or other products or services provided by anyone other than D-Link.

Disclaimer of Other Warranties: EXCEPT FOR THE 3-YEAR LIMITED WARRANTY SPECIFIED HEREIN, THE PRODUCT IS PROVIDED "AS-IS" WITHOUT ANY WARRANTY OF ANY KIND INCLUDING, WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IF ANY IMPLIED WARRANTY CANNOT BE DISCLAIMED IN ANY TERRITORY WHERE A PRODUCT IS SOLD, THE DURATION OF SUCH IMPLIED WARRANTY SHALL BE LIMITED TO NINETY (90) DAYS. EXCEPT AS EXPRESSLY COVERED UNDER THE LIMITED WARRANTY PROVIDED HEREIN, THE ENTIRE RISK AS TO THE QUALITY, SELECTION AND PERFORMANCE OF THE PRODUCT IS WITH THE PURCHASER OF THE PRODUCT.

Limitation of Liability: TO THE MAXIMUM EXTENT PERMITTED BY LAW, D-LINK IS NOT LIABLE UNDER ANY CONTRACT, NEGLIGENCE, STRICT LIABILITY OR OTHER LEGAL OR EQUITABLE THEORY FOR ANY LOSS OF USE OF THE PRODUCT, INCONVENIENCE OR DAMAGES OF ANY CHARACTER, WHETHER DIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL (INCLUDING, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF GOODWILL, WORK STOPPAGE, COMPUTER FAILURE OR MALFUNCTION, LOSS OF INFORMATION OR DATA CONTAINED IN, STORED ON, OR INTEGRATED WITH ANY PRODUCT RETURNED TO D-LINK FOR WARRANTY SERVICE) RESULTING FROM THE USE OF THE PRODUCT, RELATING TO WARRANTY SERVICE, OR ARISING OUT OF ANY BREACH OF THIS LIMITED WARRANTY, EVEN IF D-LINK HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. THE SOLE REMEDY FOR A BREACH OF THE FOREGOING LIMITED WARRANTY IS REPAIR, REPLACEMENT OR REFUND OF THE DEFECTIVE OR NON-CONFORMING PRODUCT.

GOVERNING LAW: This 3-Year Warranty shall be governed by the laws of the state of California. Some states do not allow exclusion or limitation of incidental or consequential damages, or limitations on how long an implied warranty lasts, so the foregoing limitations and exclusions may not apply. This limited warranty provides specific legal rights and the product owner may also have other rights which vary from state to state.

Trademarks

Copyright© 2002 D-Link Corporation. Contents subject to change without prior notice. D-Link is a registered trademark of D-Link Corporation/D-Link Systems, Inc. All other trademarks belong to their respective proprietors.

Copyright Statement

No part of this publication may be reproduced in any form or by any means or used to make any derivative such as translation, transformation, or adaptation without permission from D-Link Corporation/D-Link Systems Inc., as stipulated by the United States Copyright Act of 1976.

CE Mark Warning

This is a Class B product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communication. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum of 20 cm (approximately 8 inches) between the radiator and your body.

Registration: Register your D-Link AirPlus DI-614+ online at <http://www.support.dlink.com/register>